

STAINLESS STEEL SEQUESTR EXTERNAL DISCONNECT ENCLOSURE, TYPE 4X



- Maintains UL Type 4X rating
- Provision for pass-through power into the main enclosure—blank plate for customer modification
- Preferred disconnect cutout
- Quarter-turn slotted latches and 3-point latch
- Removable door with hidden hinges
- Bonding provision on door
- Conductive back panel included
- Installation hardware and templates included
- Operating temperature range: -40 C to +200 F standard polyurethane gasket

FINISH

- Smooth #4 brushed finish
- Included panel has conductive finish

ACCESSORIES

Door Stop Kit

Window Kit

BULLETIN: A70DS

INDUSTRY STANDARDS

UL 508A Listed; Type 3R, 4, 4X, 12; File No. E61997
cUL Listed per CSA C22.2 No. 94; TType 4, 4X, 12; File No. E61997

NEMA/EEMAC Type 3R, 4, 4X, 12
IEC 60529, IP66


APPLICATION

Retrofit disconnect enclosures to isolate incoming power and help mitigate arc flash occurrences by moving the disconnect switch to the Sequestr enclosure. Power is passed-through to the main enclosure.

The Sequestr enclosure is sized for use with up to 200A disconnect switches and designed to fit with bulletins A28S4 main enclosures.

SPECIFICATIONS

- 14 gauge 304 steel
- Seams continuously welded and ground smooth
- Hinged on right side
- Interlocks with doors of main control enclosures when the disconnect switch is powered ON

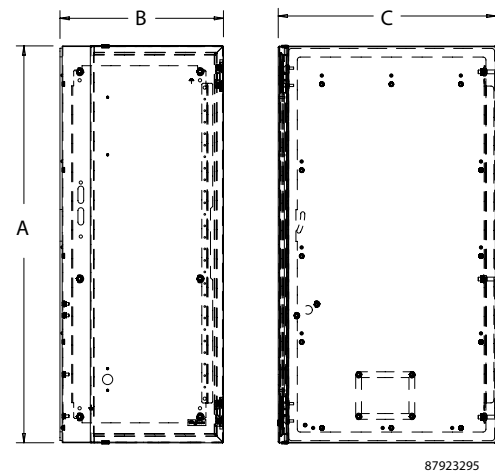

87923295

Standard Product

Catalog Number	Catalog Number Cross-Reference	AxBxC in.	AxBxC mm
AXD18SS	AXD341418SS	34.45 x 14.00 x 18.12	875 x 356 x 460
AXD20SS	N/A	34.45 x 14.00 x 20.12	875 x 356 x 511
AXD24SS	AXD341424SS	34.45 x 14.00 x 24.12	875 x 356 x 613

SEQUESTR EXTERNAL DISCONNECT ACCESSORIES



Optional Terminal Plates and Replacement Conductive Panel for Sequestr External Disconnect Enclosures.

BULLETIN: A70D

Catalog Number	Description	Panel Gauge	Panel Size in./mm
A31P12G	Conductive panel	16	31.00 x 12.16 787 x 309
ATBP3060	Terminal plate for 30 and 60 amp switches	-	-
ATBP100	Terminal plate for 100 amp switches	-	-
ATBP200	Terminal plate for 200 amp switches	-	-


Terminal Plates rated IP20

DISCONNECT MOUNTING SPACE

Disconnects are located by dimension E1. Wiring space W1 is available when disconnect is installed in the enclosure. See the Hoffman Specifier's Guide Technical Information chapter for E1 Spacing by Enclosure Height for various disconnect switch manufacturers.

Refer to **National Electrical Code® 2008** article 430.10(B) for wiring space required for line side conductors to be connected to disconnect. **Verify your application to determine if wiring space is adequate.**

Consult Space Occupied by Disconnect drawing to determine whether the disconnect device you are using will fit the enclosure size you have selected.

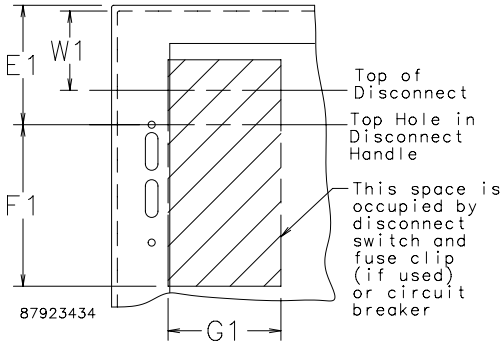

Consult disconnect manufacturer for F1 and G1 dimensions.

STAINLESS STEEL SEQUESTR PREFERRED-CUTOUT OVERVIEW



APPLICATION

The Sequestr enclosures have the standard preferred cutout on the left-hand flange. They accept up to 200A disconnect switches from Allen-Bradley and Schneider Square D.

Sequestr cutouts are designed to house the following:

- Allen-Bradley**
 - Bulletin 1494V DSX left-hand disconnect switches with flange-mount variable-depth operating mechanisms and Bulletin 1494V flange-mount variable depth operating mechanisms for circuit breakers.
 - Bulletin 1494U Allen-Bradley universal disconnect switches with flange-mount handles for either variable-depth or cable-operated mechanisms.

These enclosures will NOT accept Allen-Bradley Bulletin 1494F disconnect devices or Bulletin 1494D circuit breaker operators.

Schneider Square D® Class 9422 disconnect switches with flange-mount left-hand variable-depth operating mechanisms and Class 9422 flange-mount left-hand variable-depth operating mechanisms for circuit breakers.

These enclosures will NOT accept Square D Class 9422 bracket-mounted disconnect devices, Class 9422TGI or TG2 devices.

ORDERING

Disconnect switch (or circuit breakers), operating handle and operating mechanism are not furnished with enclosure. Consult the nVent HOFFMAN Specifier's Guide Technical Information chapter for wire bend information. Consult drawings to match the disconnect device you are using with the correct enclosure size.

A complete assembly consists of:

1. An enclosure
2. Door interlock brackets
3. 3-point door latching system
4. Instructions to locate and install disconnect
5. Grounding hardware kit
6. Conductive panel in Sequestr External Disconnect Enclosure