

Straight Plastic Anchors




Installation Instructions

221 • 222 • 223 • K6D • K6DTP


Installation Guidelines

Drill a hole into the base material to the depth of embedment required. The tolerances of the drill bit used should meet the requirements of ANSI

Standard B212.15.

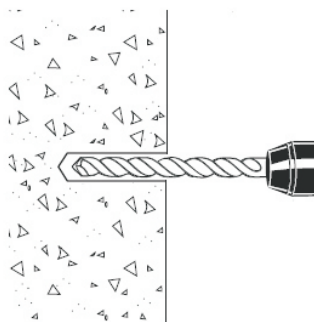

Blow the hole clean of dust and other material. Insert the anchor into the hole until it is flush with the surface of the base material.

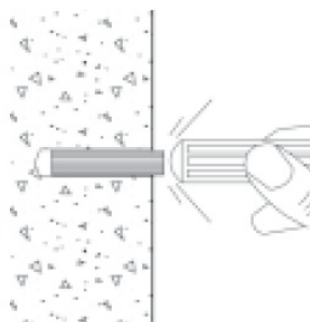

Position the fixture. Insert the proper size screw through the fixture into the top of the anchor and tighten. Be sure screw thread fully engages the anchor body.

