





















# Floor standing enclosures Combinable and compact version

## MOUNTING INSTRUCTIONS

7697-0262-01 REV.16

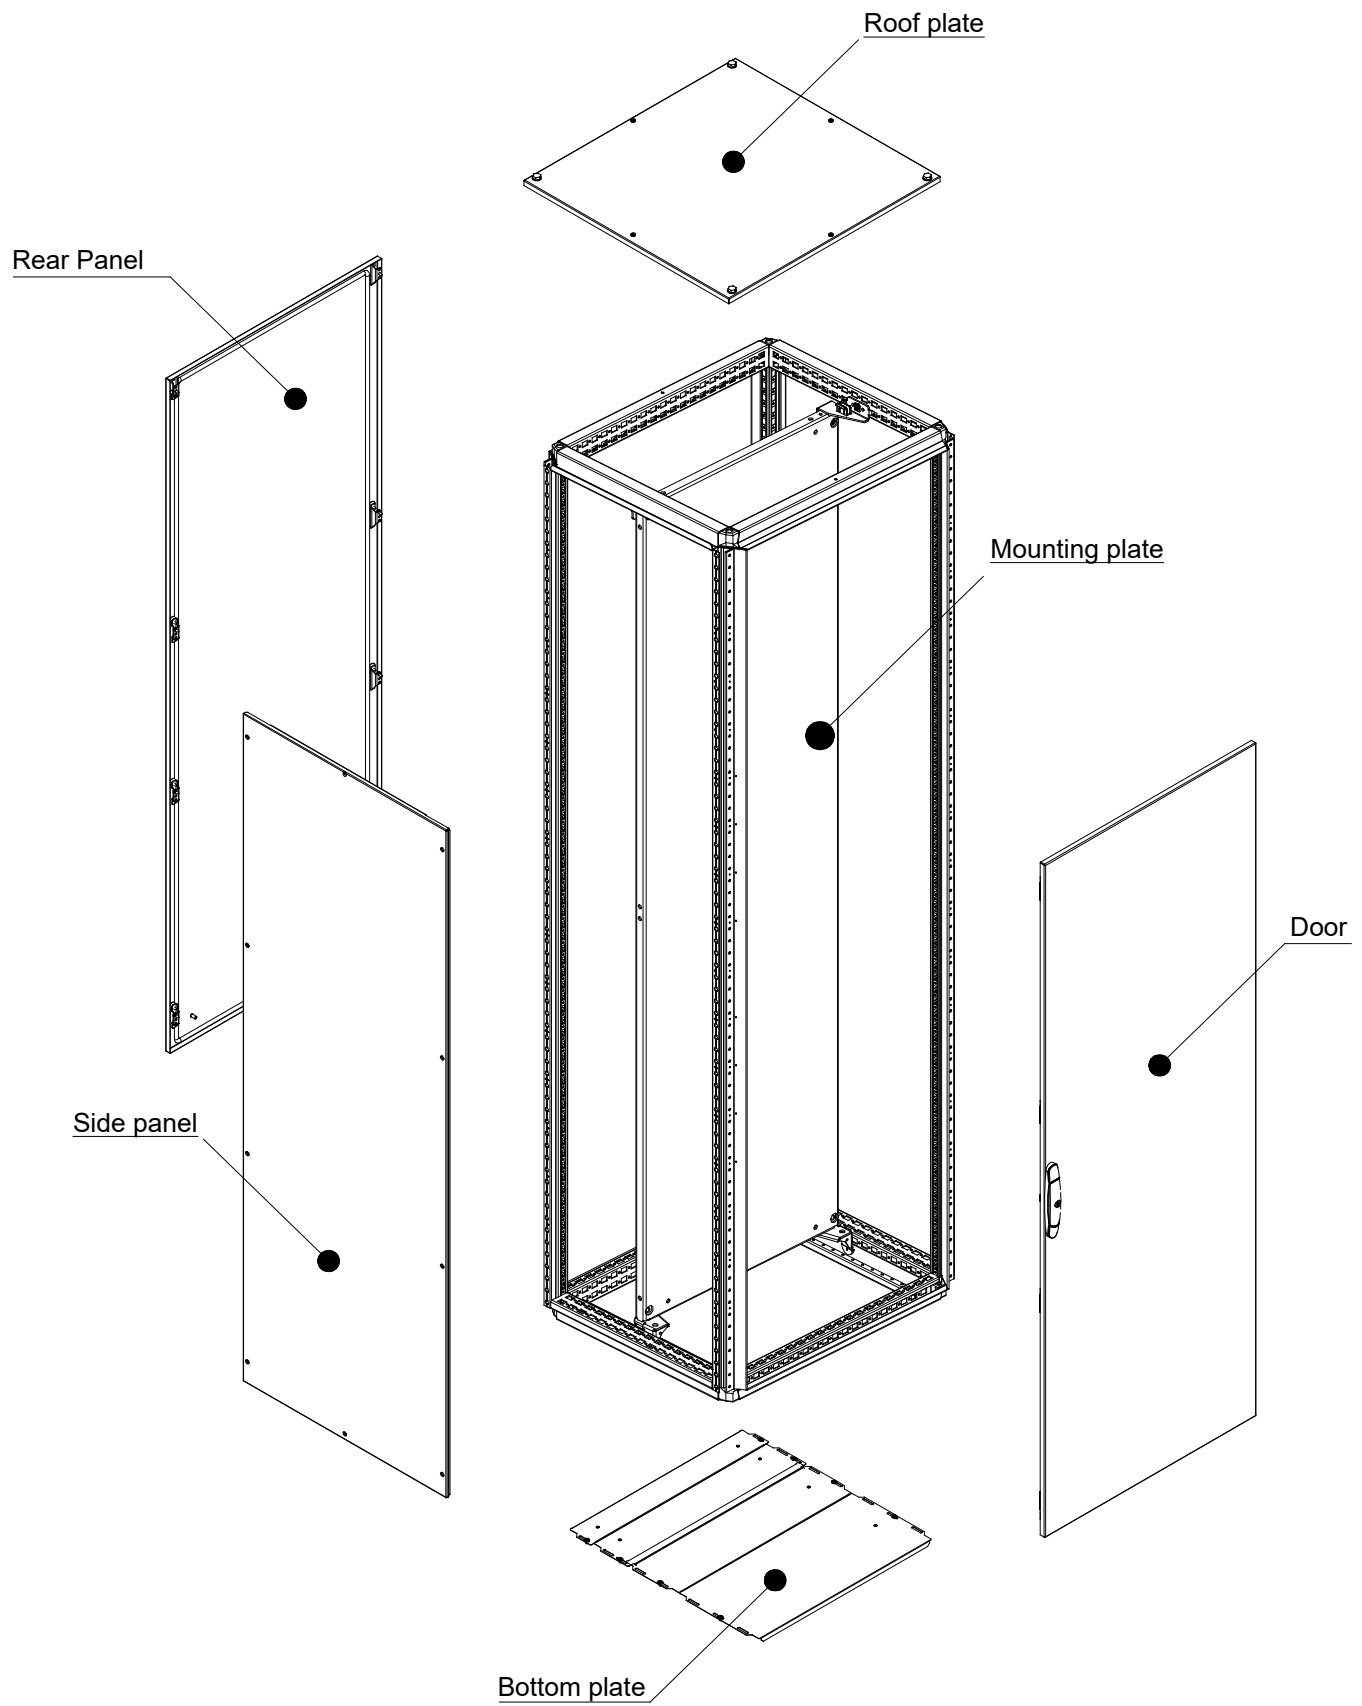




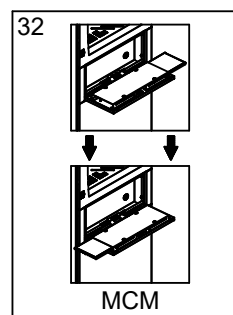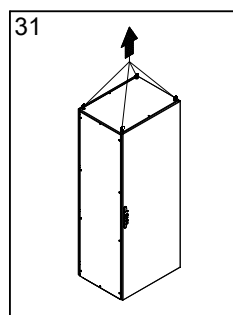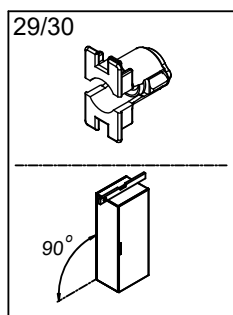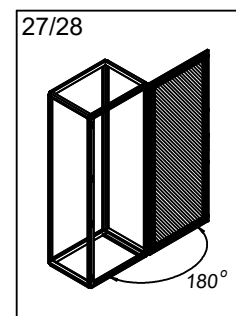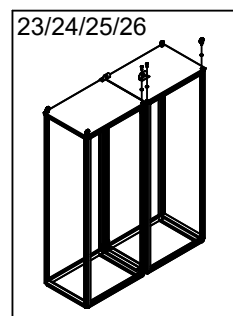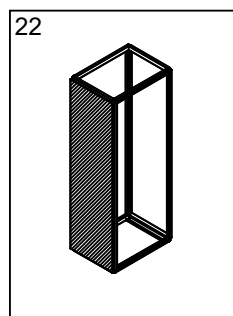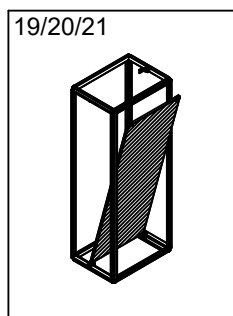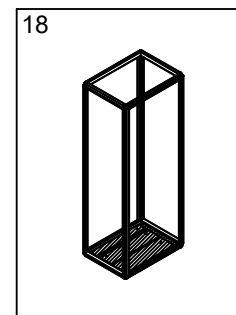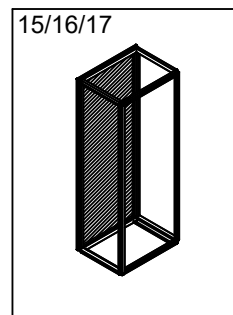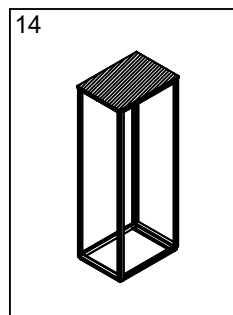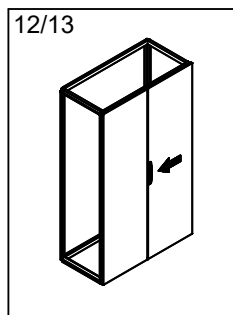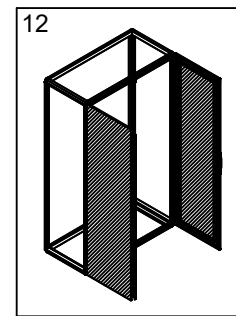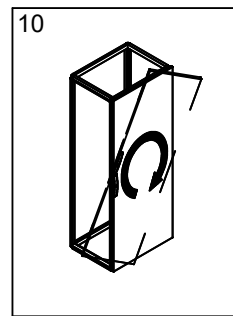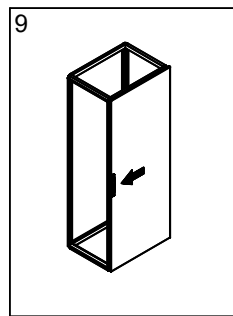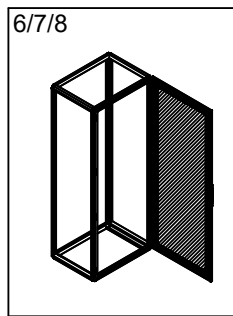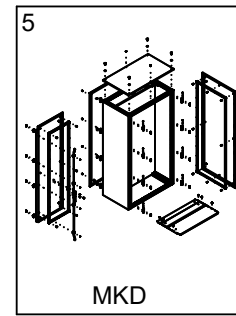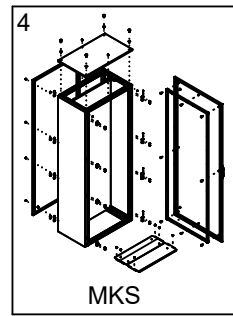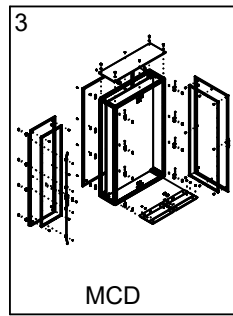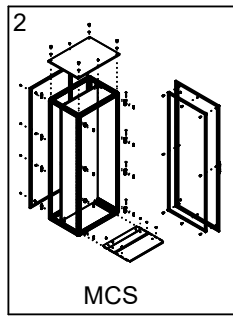

**WARNING:** When mounting on or over a combustible surface, a floor plate of at least 1.43 mm galvanized or 1.6 mm uncoated steel extended at least 150 mm beyond the equipment on all sides must be installed.




**WARNING:** In order to maintain the environmental integrity of the enclosure, devices with the same environmental ratings shall be used to close openings in customized enclosure.

# MCS

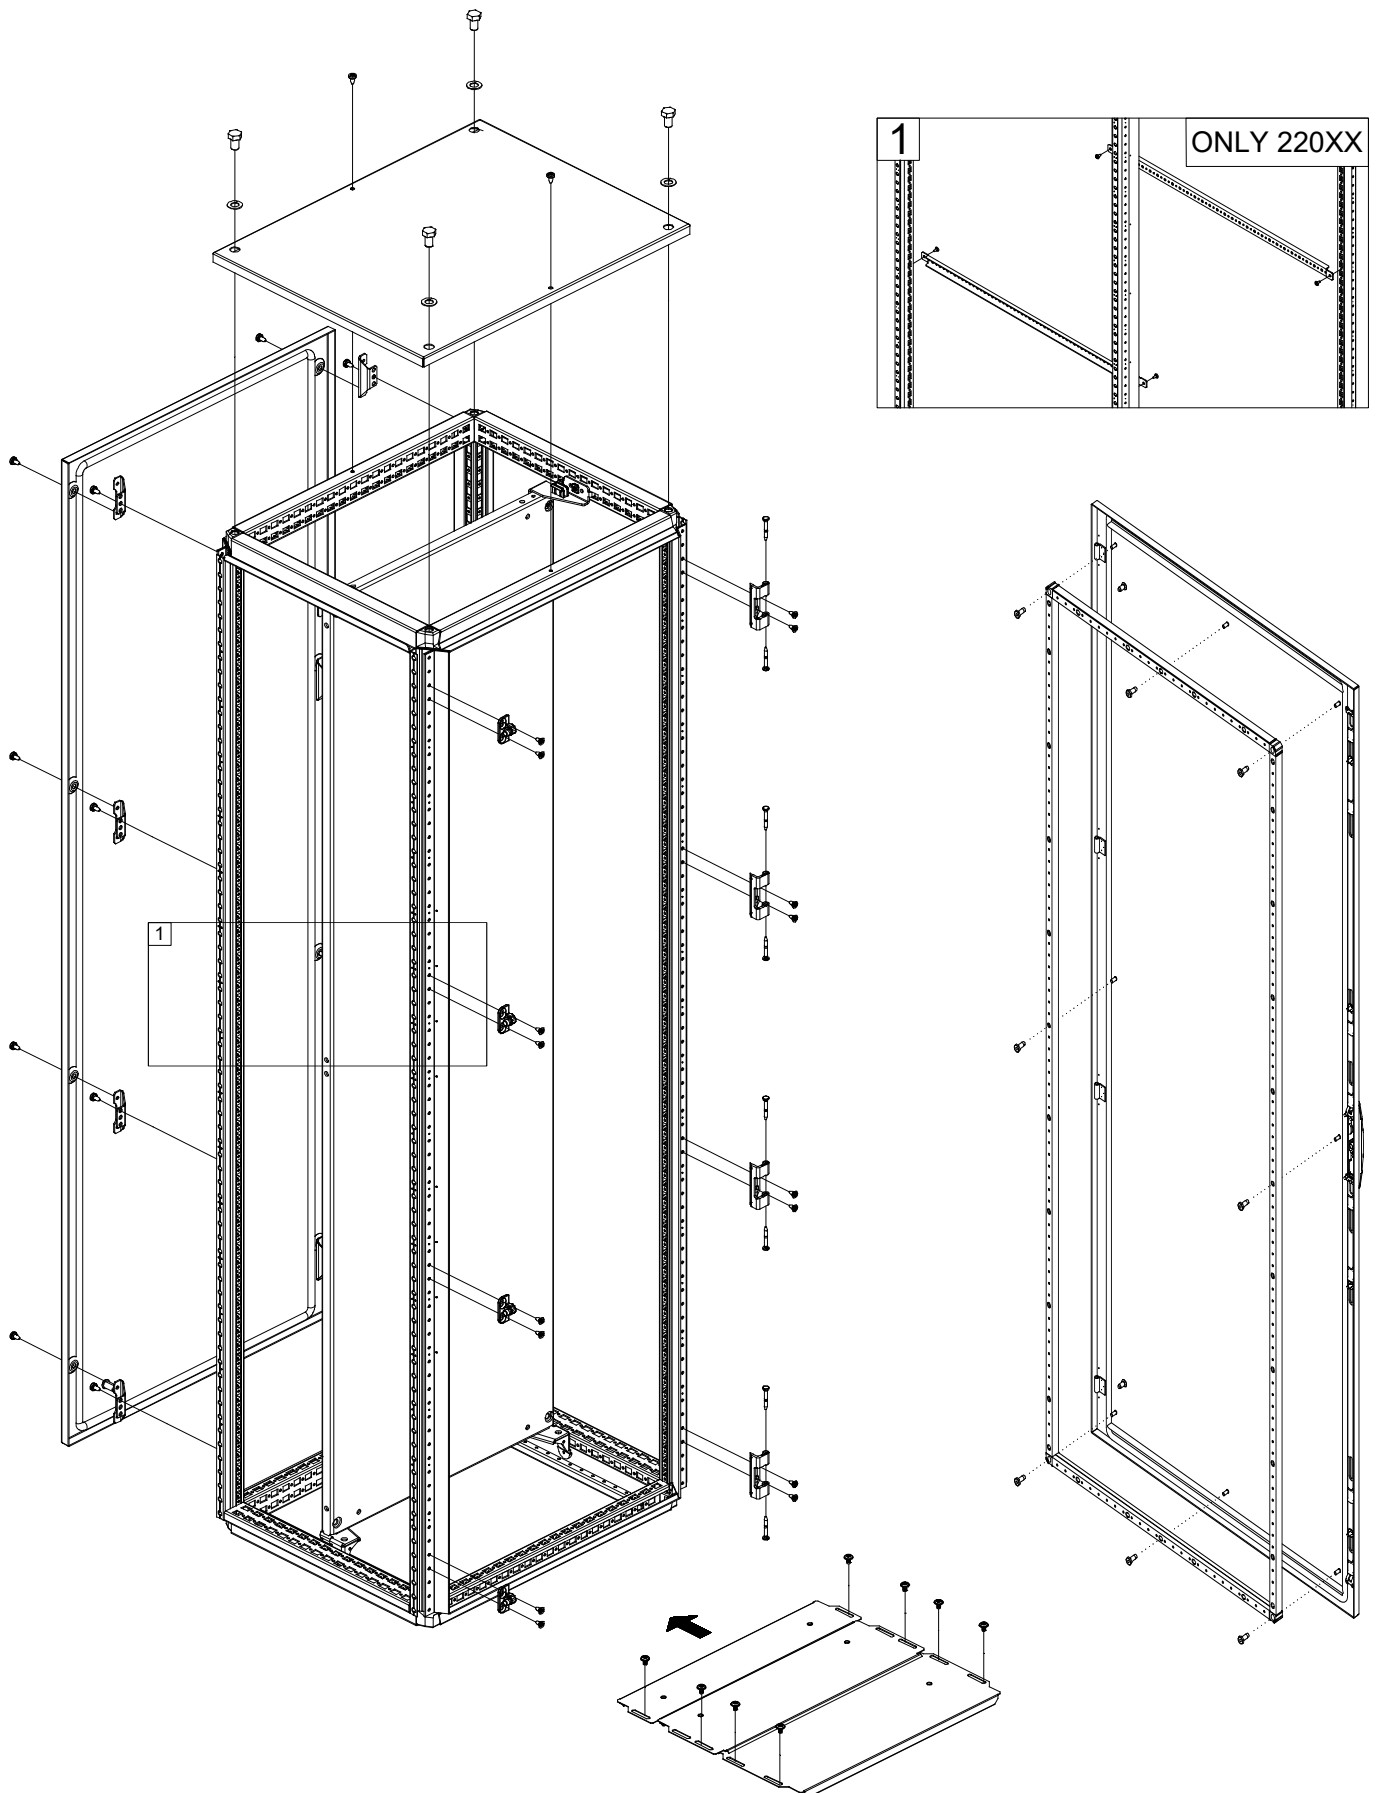





# MCD

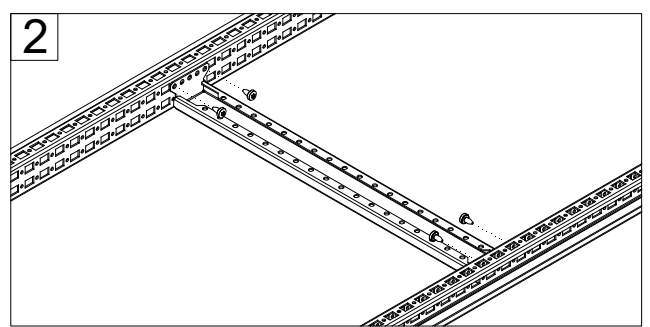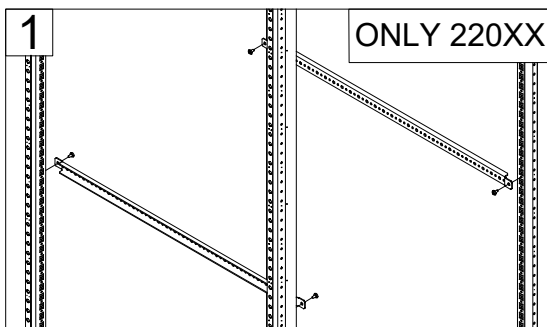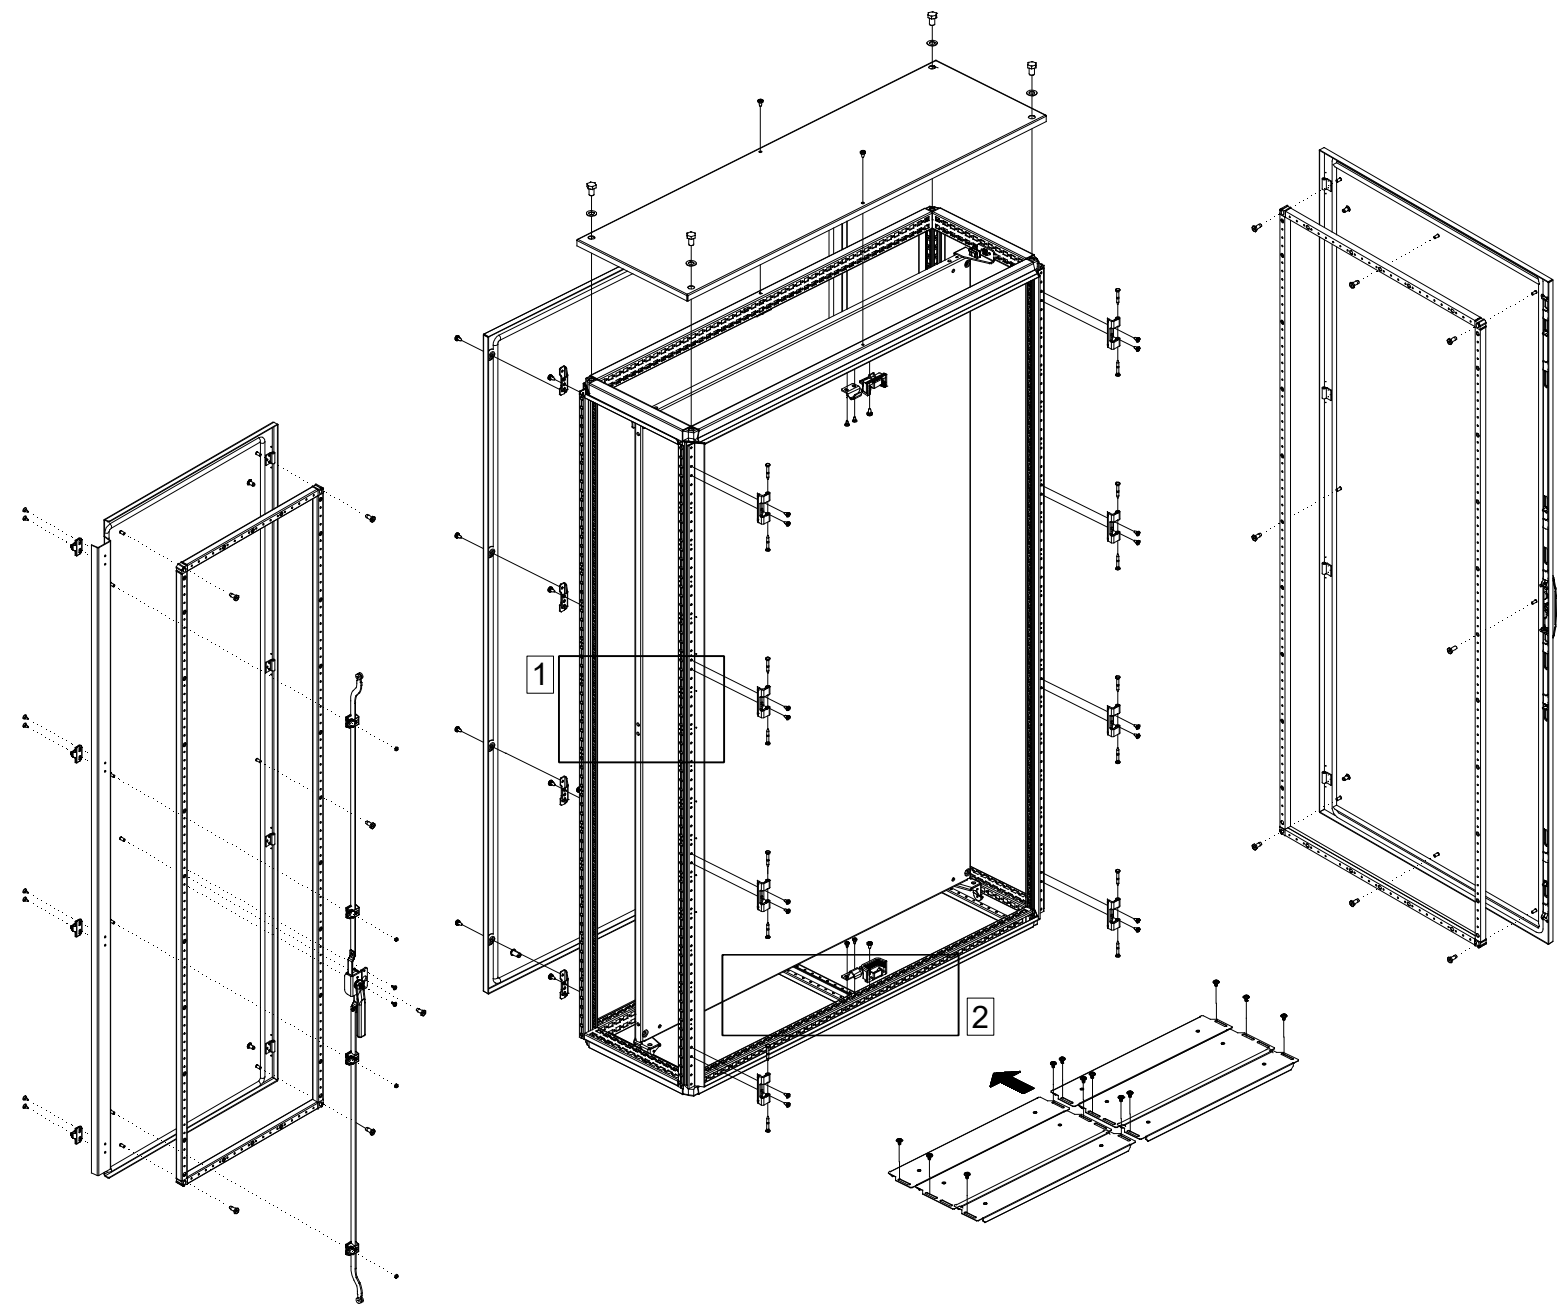

## MKS

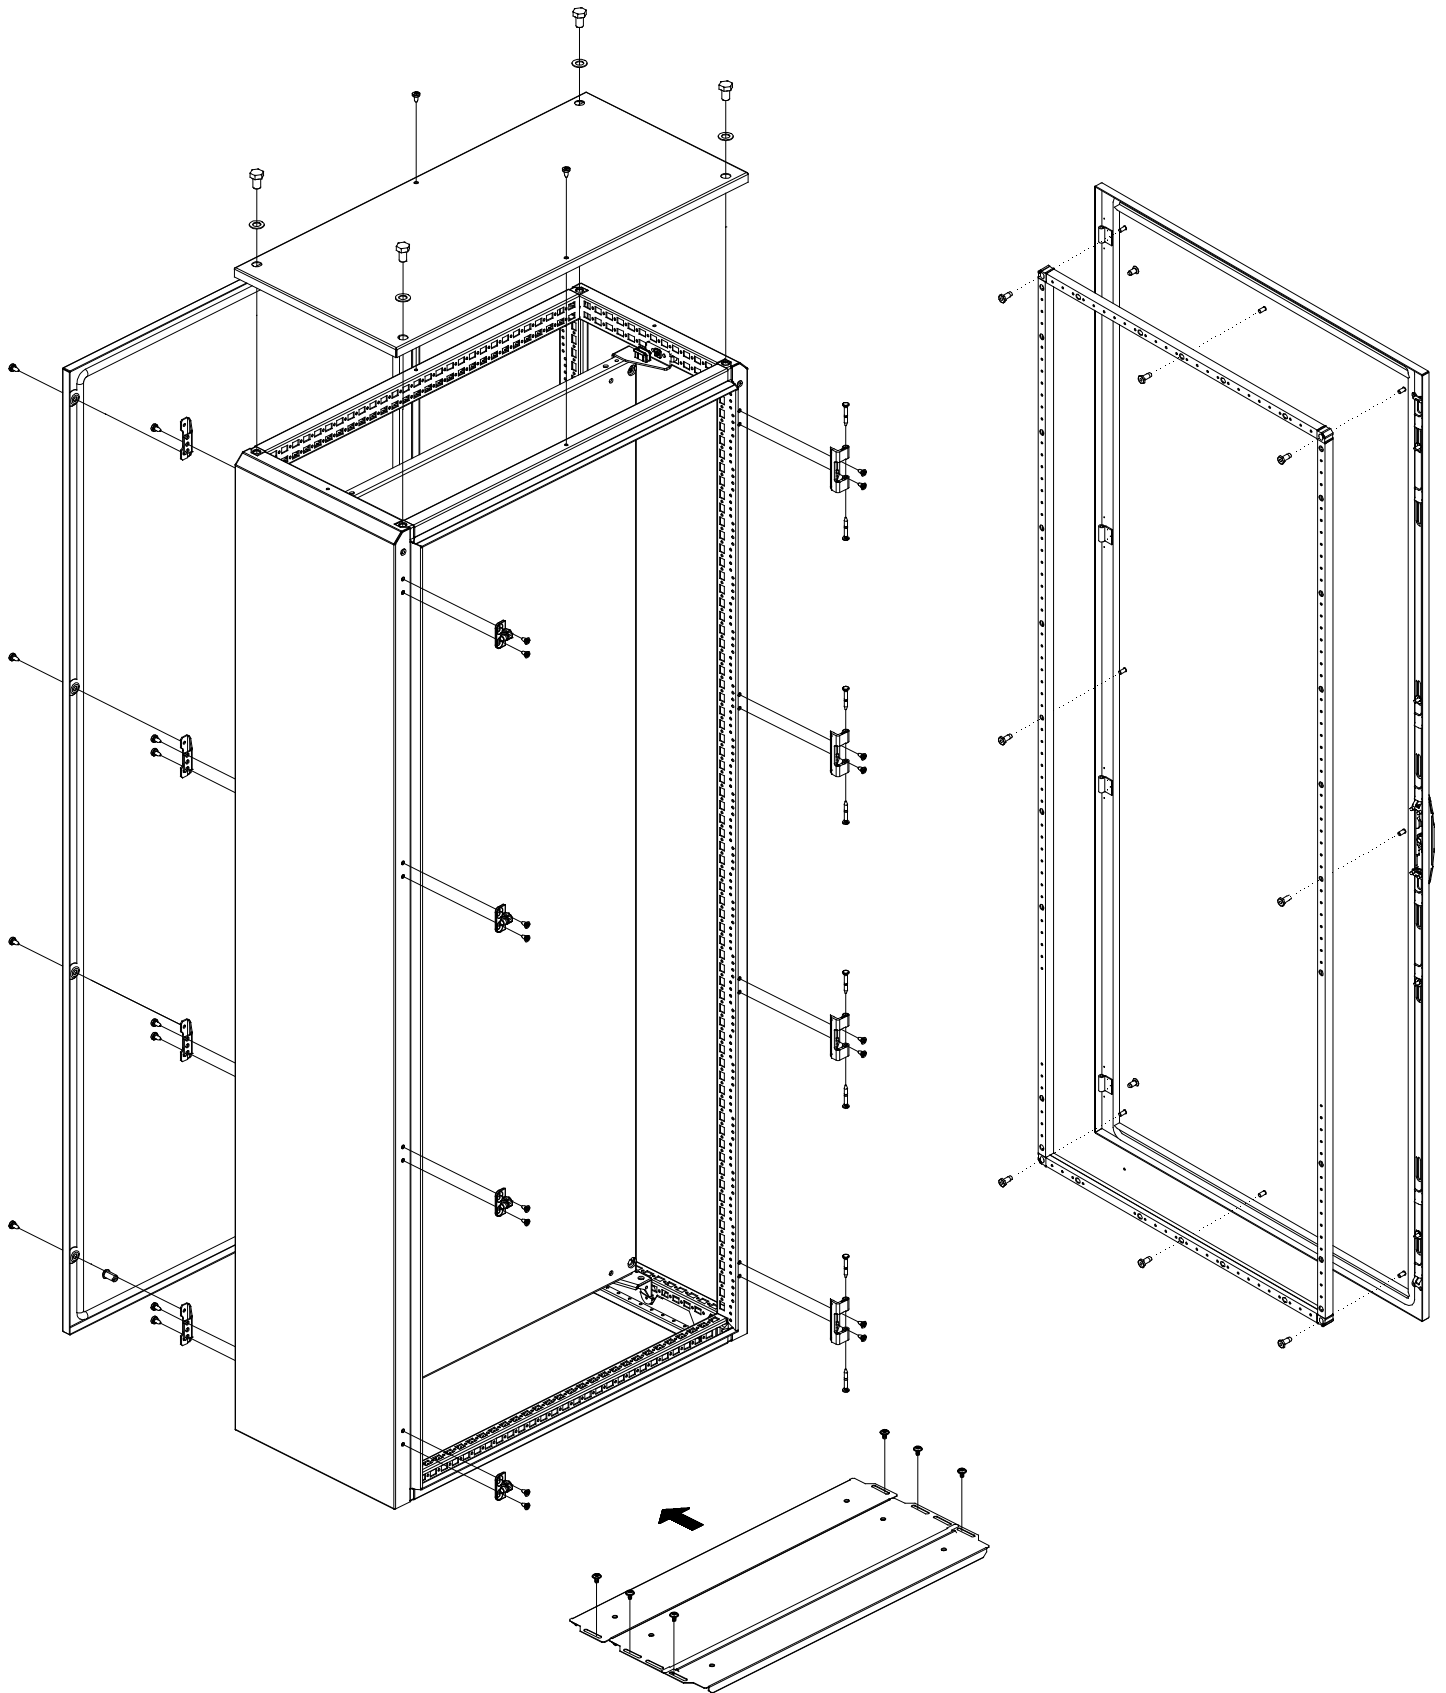






## MKD

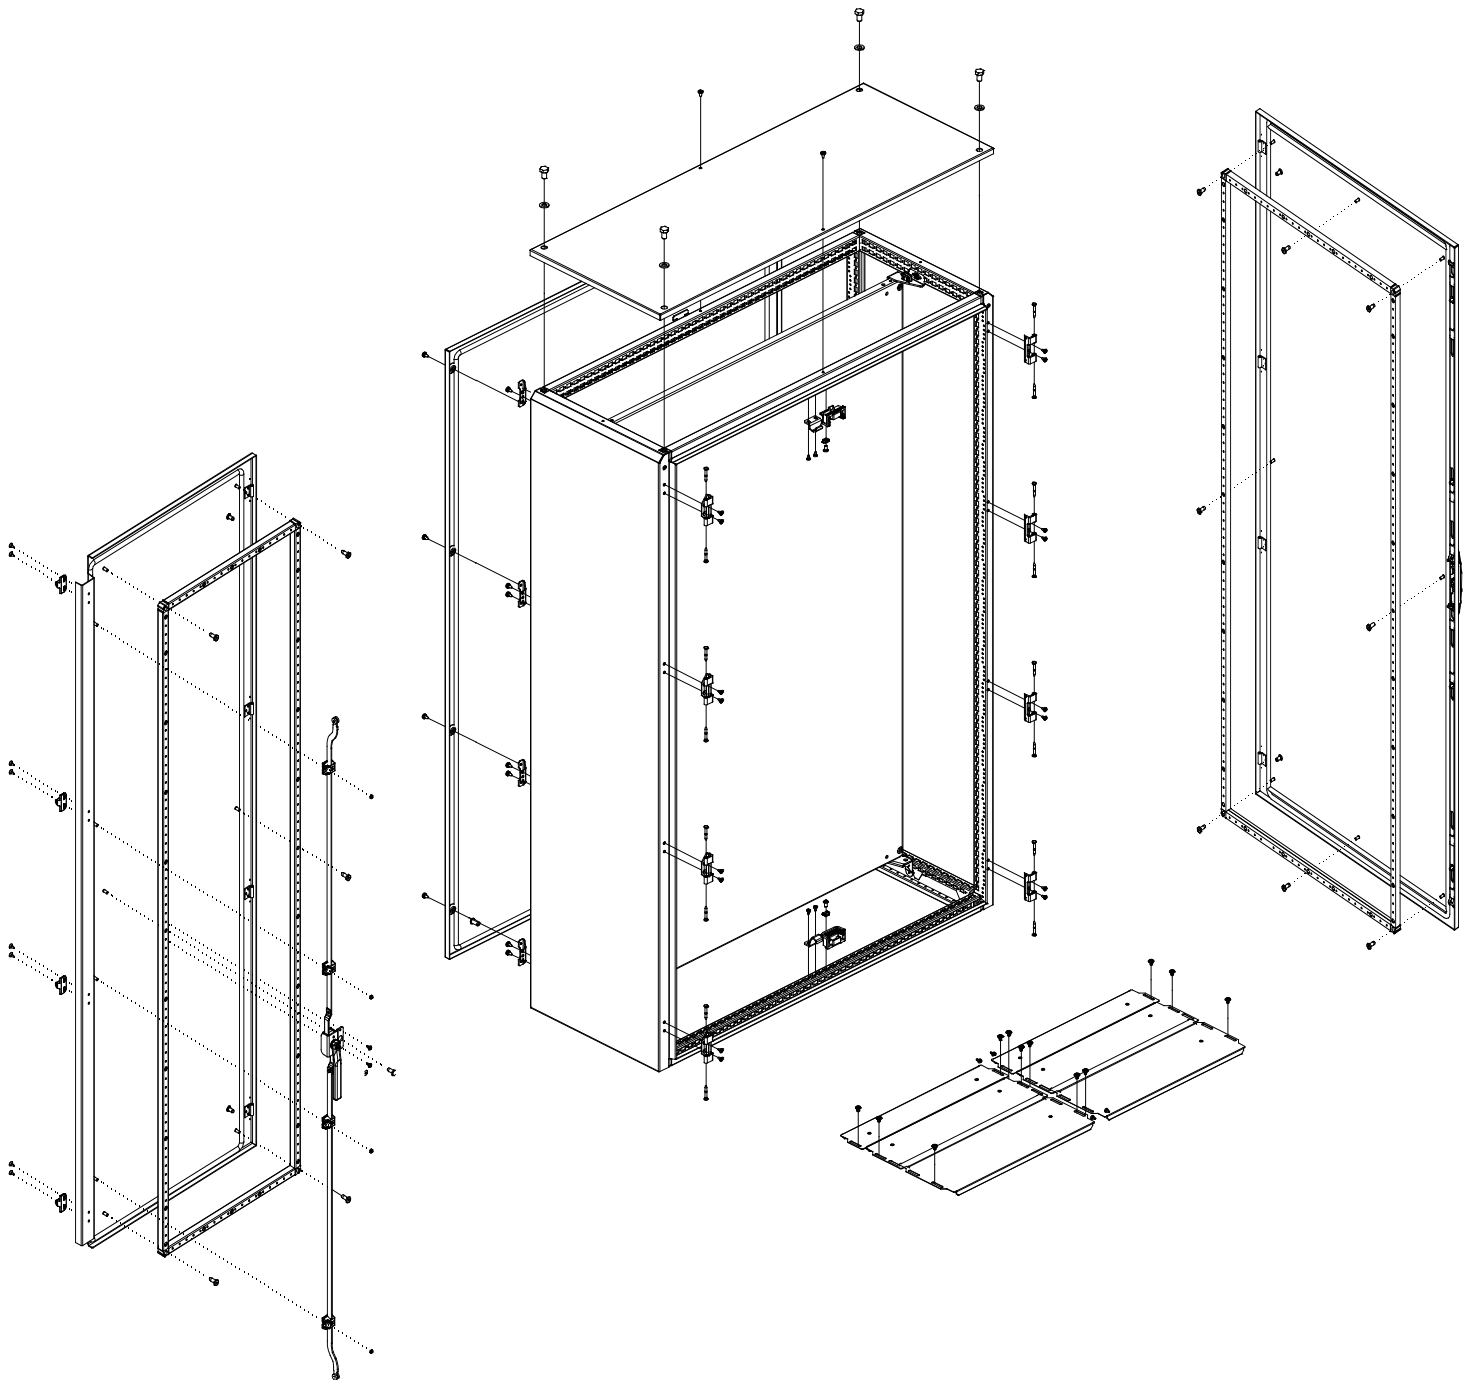






# COMBINABLE ENCLOSURE

| H    | A   |
|------|-----|
| 1100 | 175 |
| 1400 | 325 |
| 1600 | 425 |
| 1800 | 525 |
| 2000 | 625 |
| 2200 | 725 |

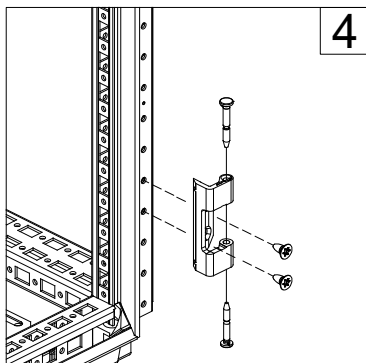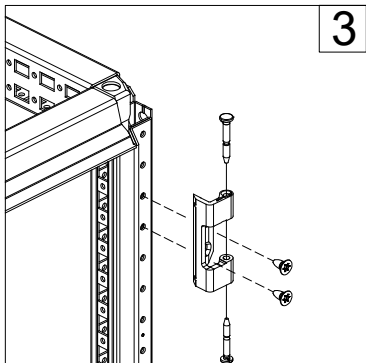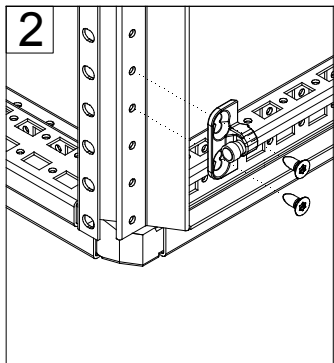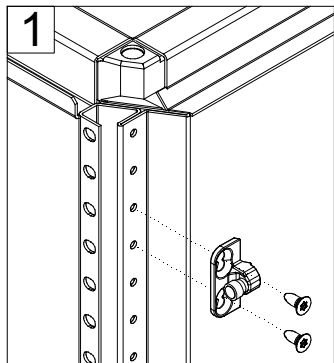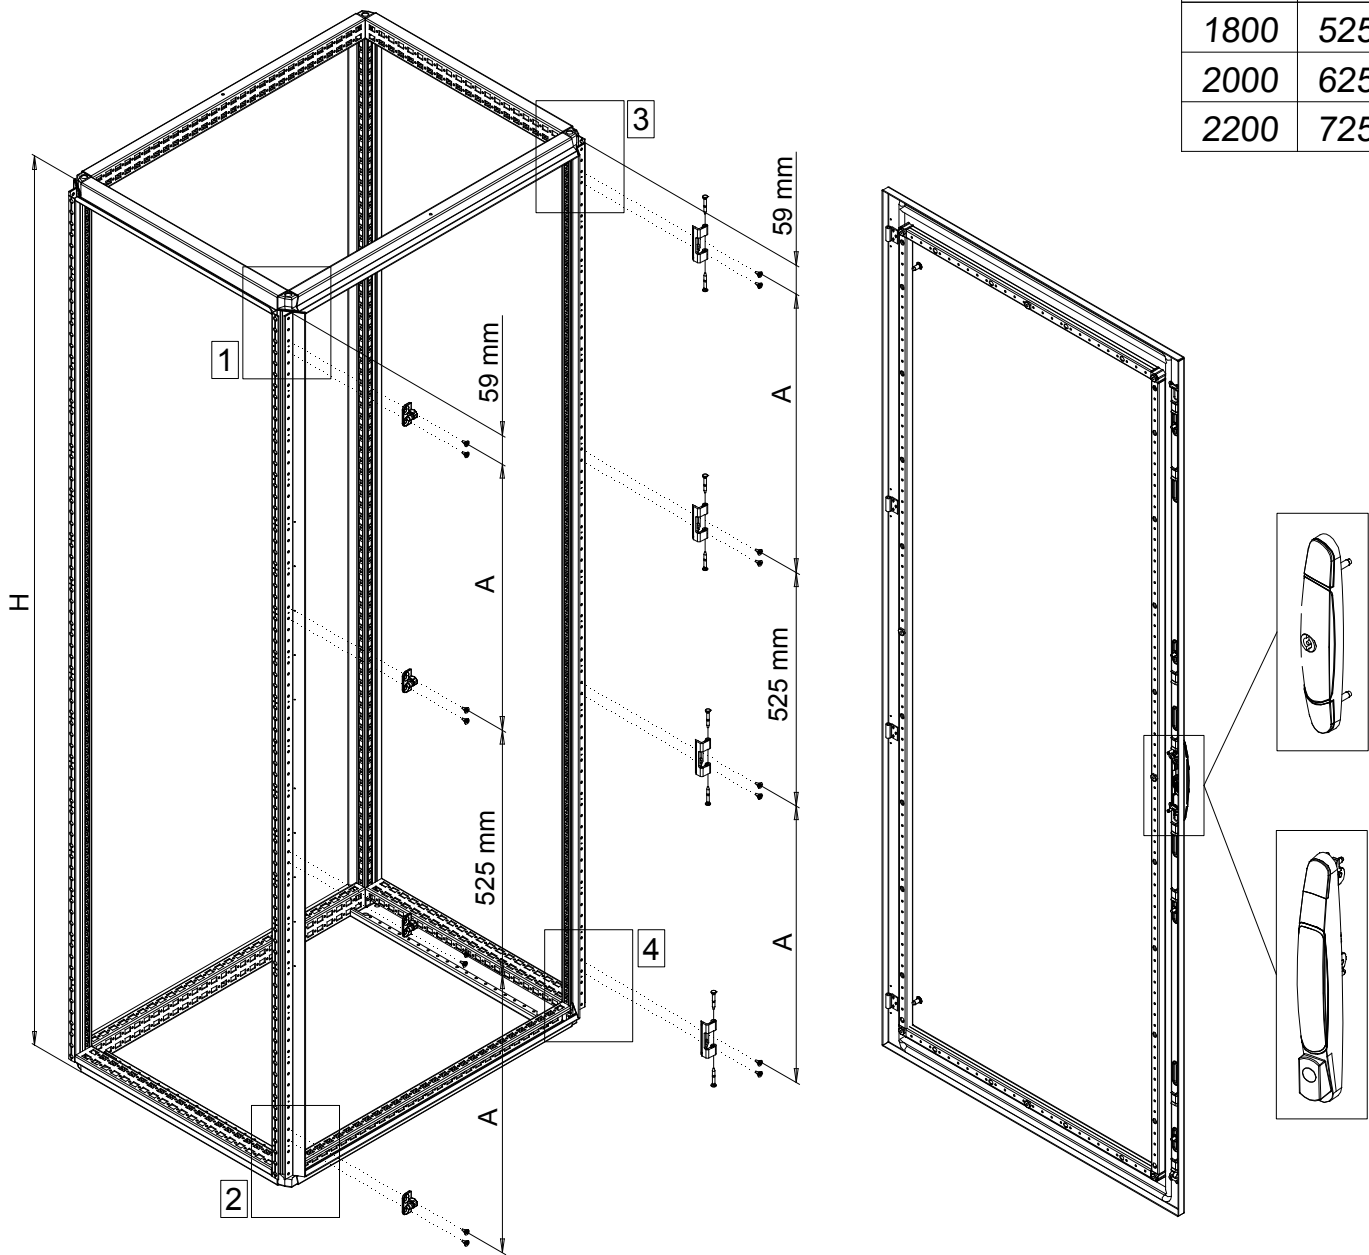










# COMPACT ENCLOSURE

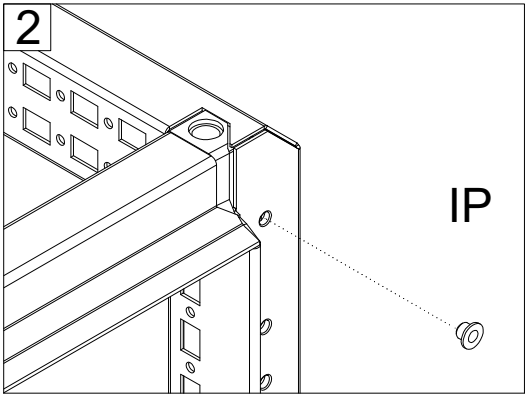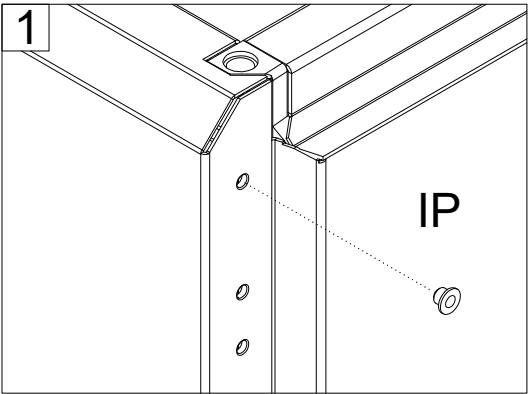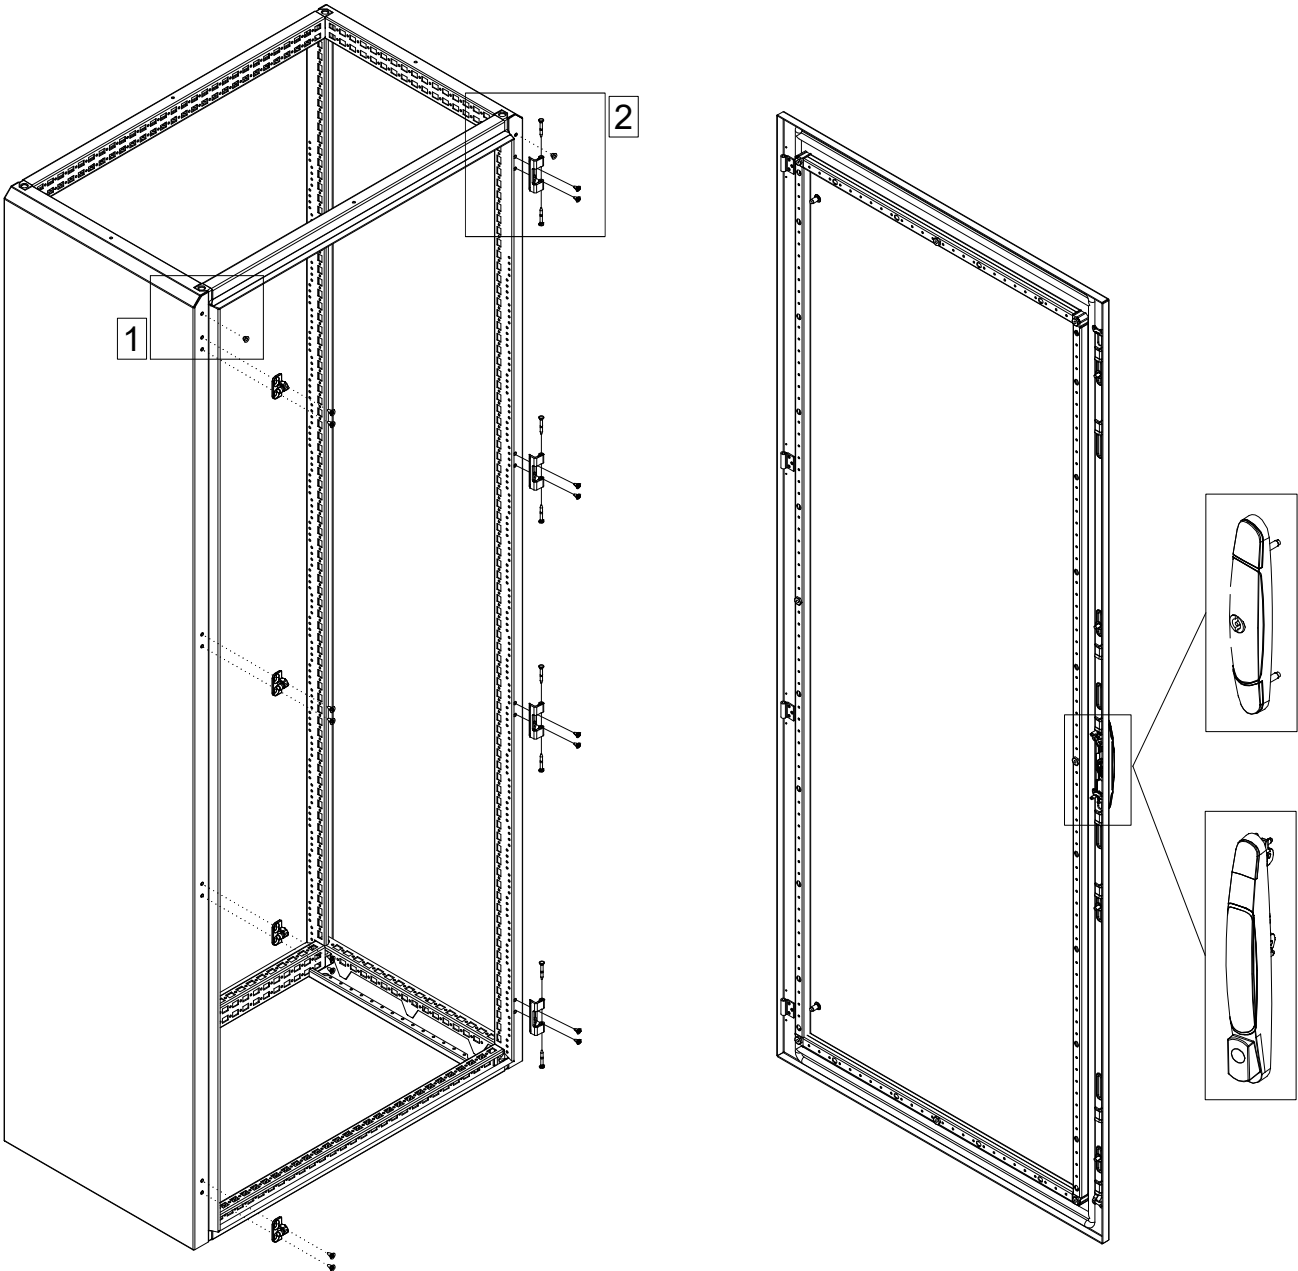



| Ref. | Pic.                                                                                      | Qty. |
|------|-------------------------------------------------------------------------------------------|------|
| A    |  M5x10 | 2    |
| B    |  M5    | 4    |


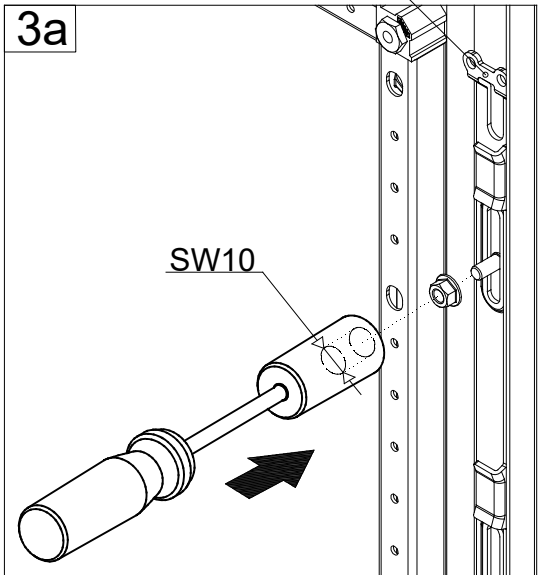
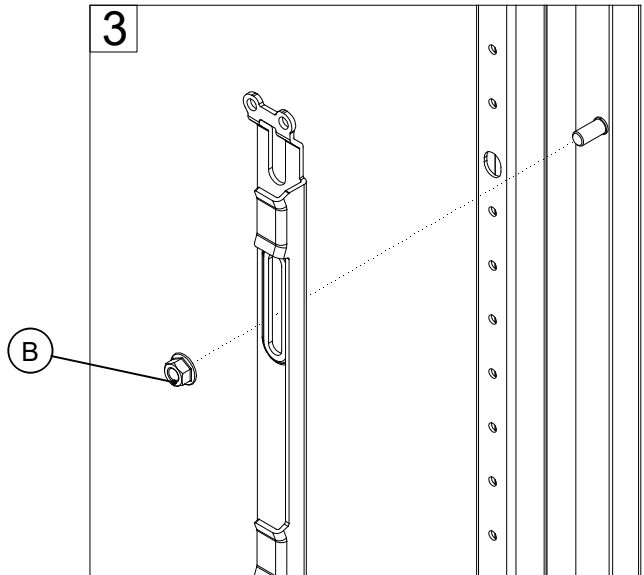
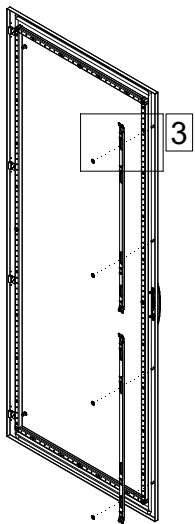
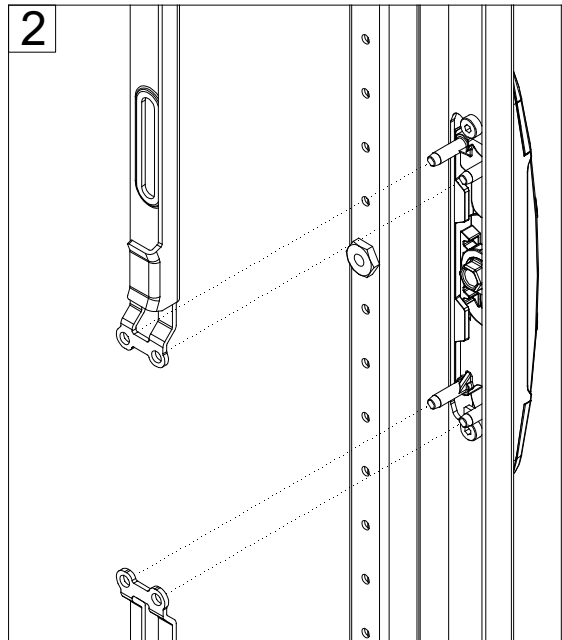
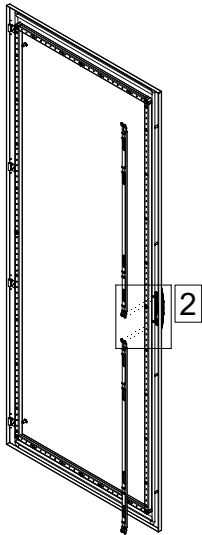
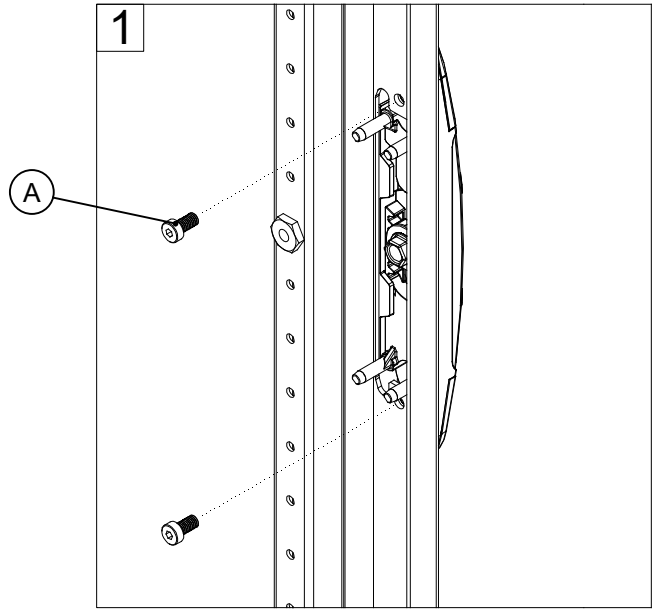
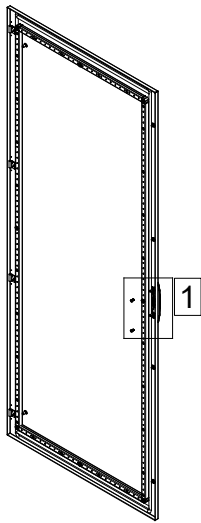


Metal Guider

SW10





# MOUNTING THE LIFT HANDLE

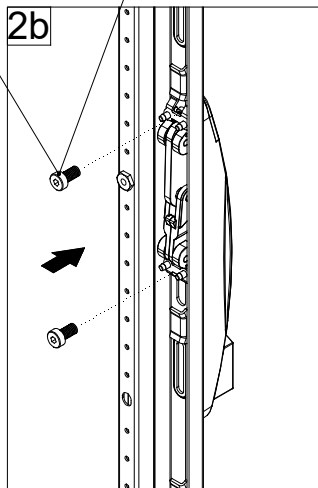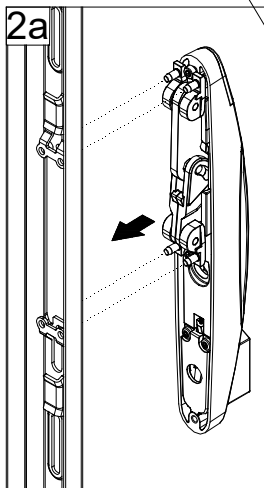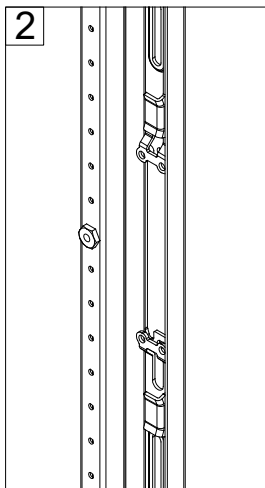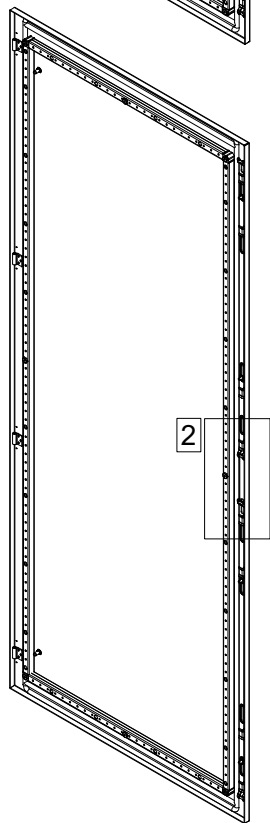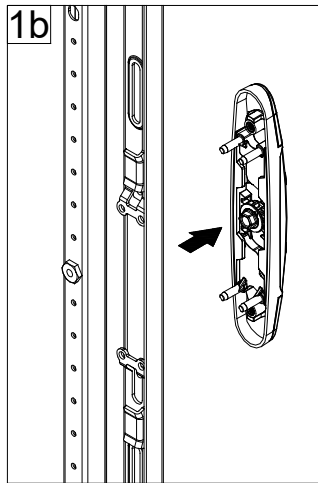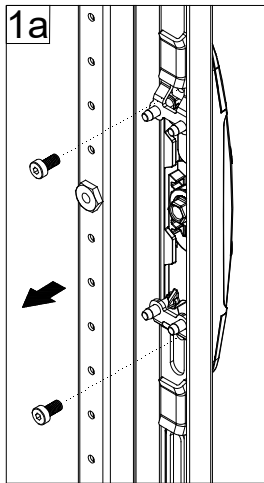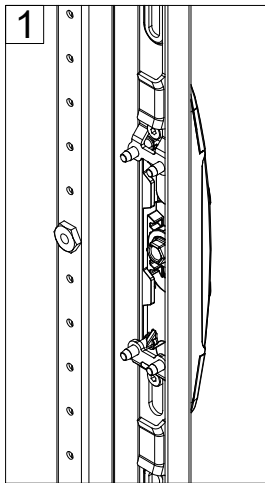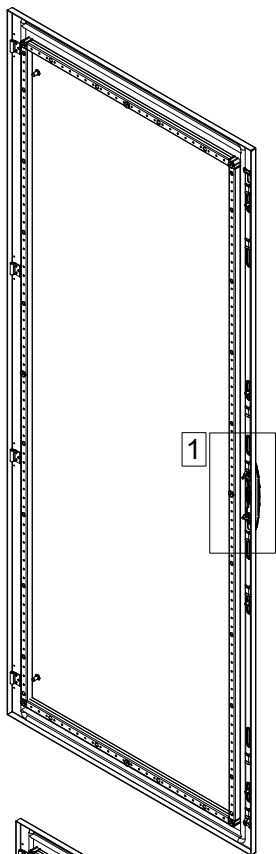





Torque  
4-5.5 Nm

A




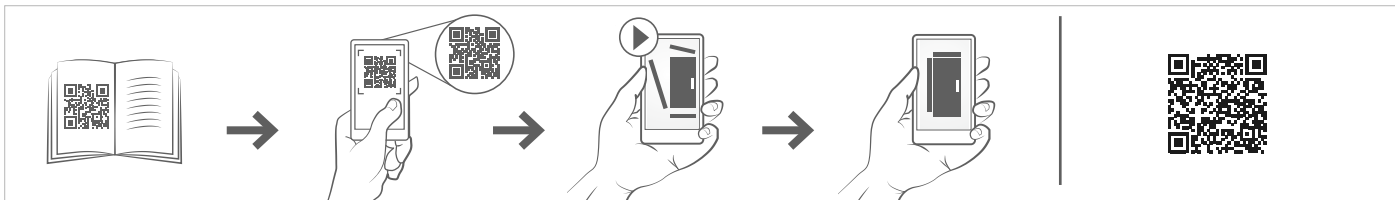


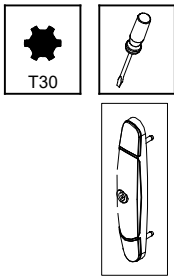

Standard Locking System

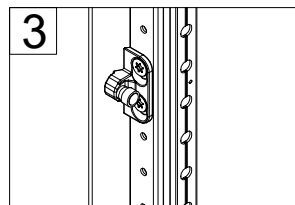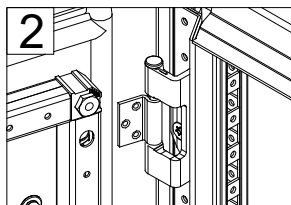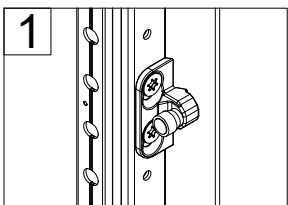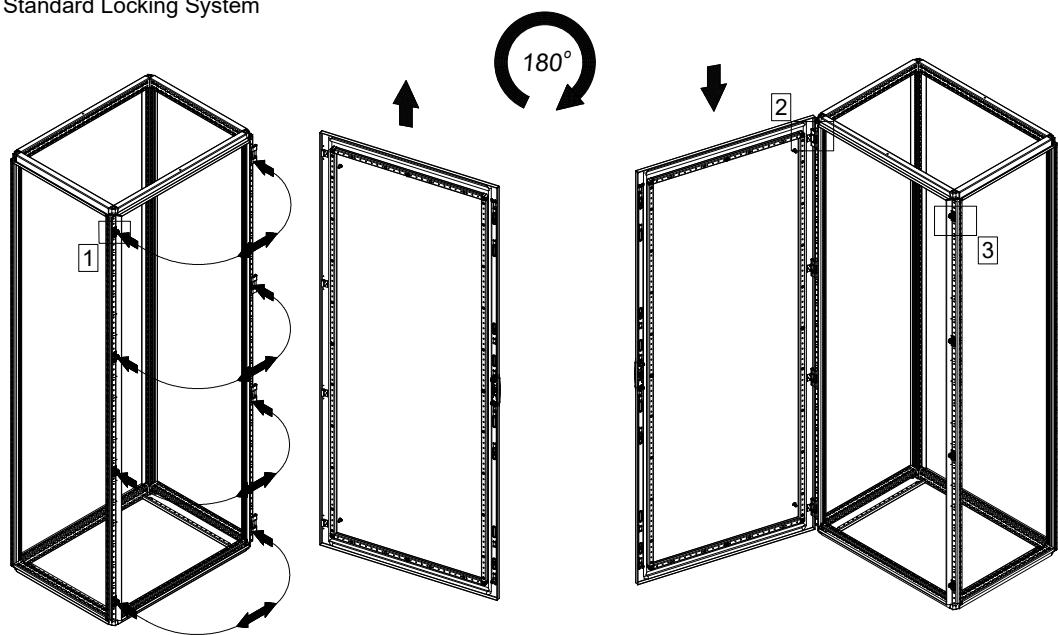


Lift Handle Locking System

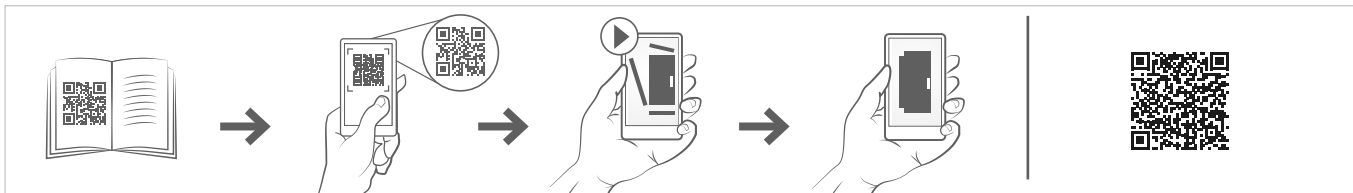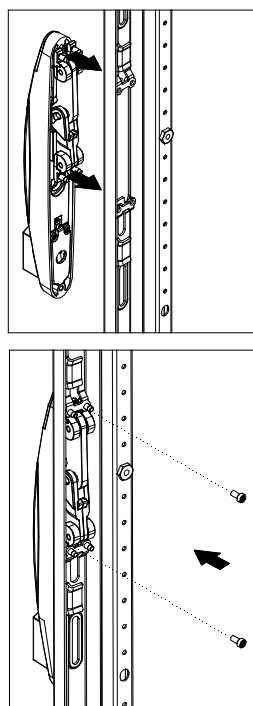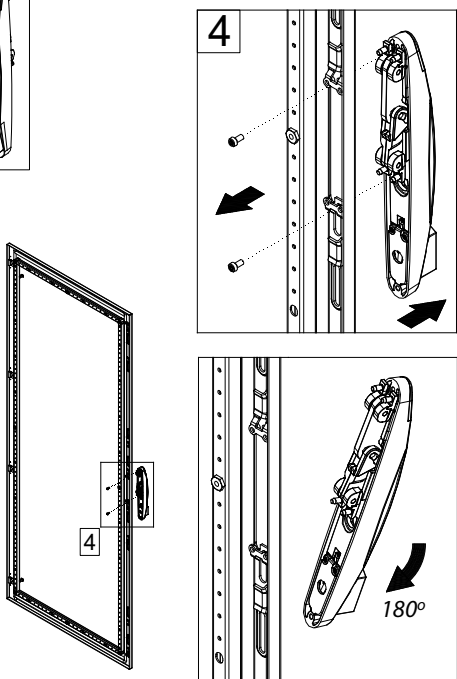




Standard Locking System

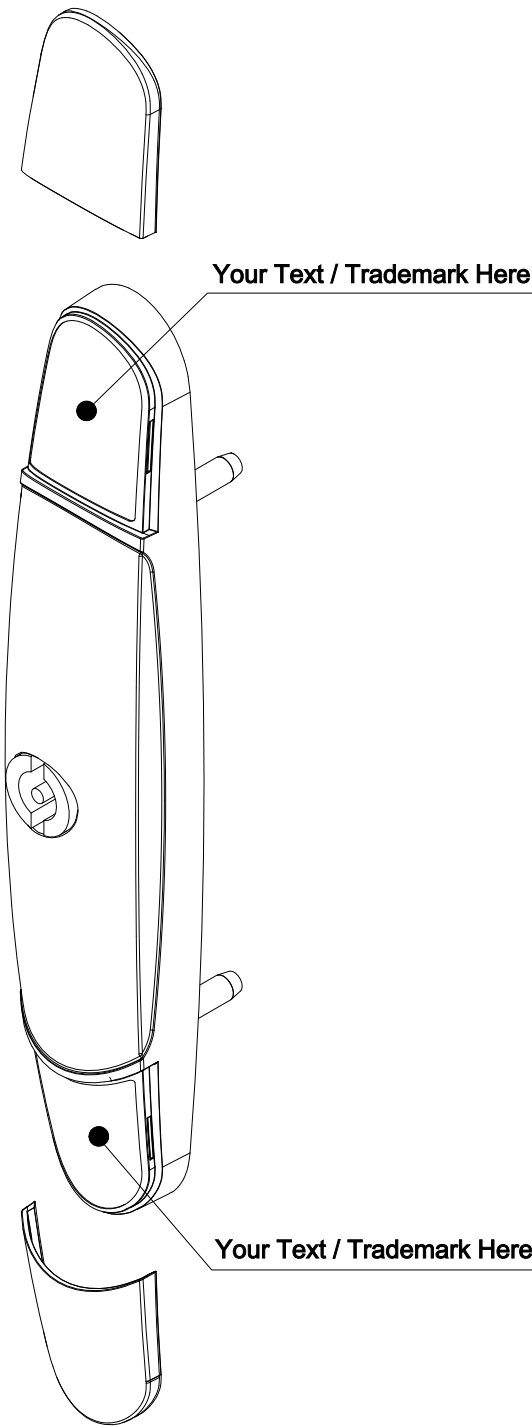






Lift Handle Locking System

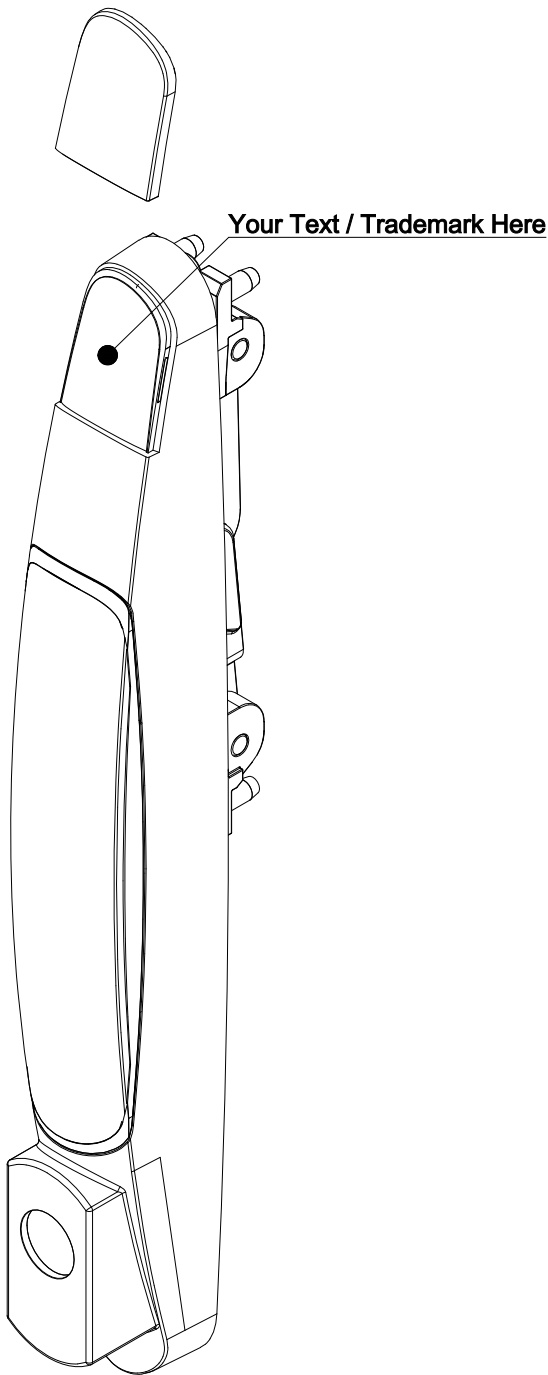



NOTE: transparent covers are ordered separately



| Ref. | Pic. |    |
|------|------|----|
| A    |      | 8  |
| B    |      | 2  |
| C    |      | 2  |
| D    |      | 16 |
| E    |      | 2  |
| F    |      | 2  |

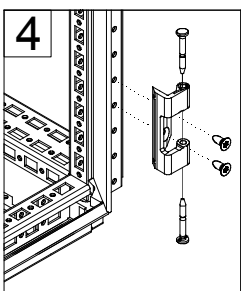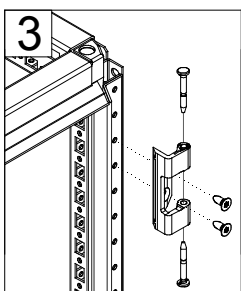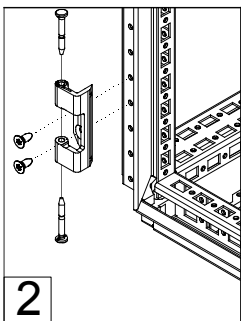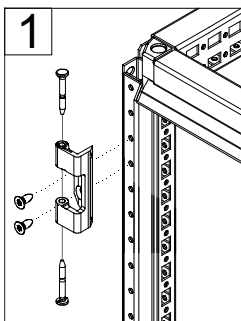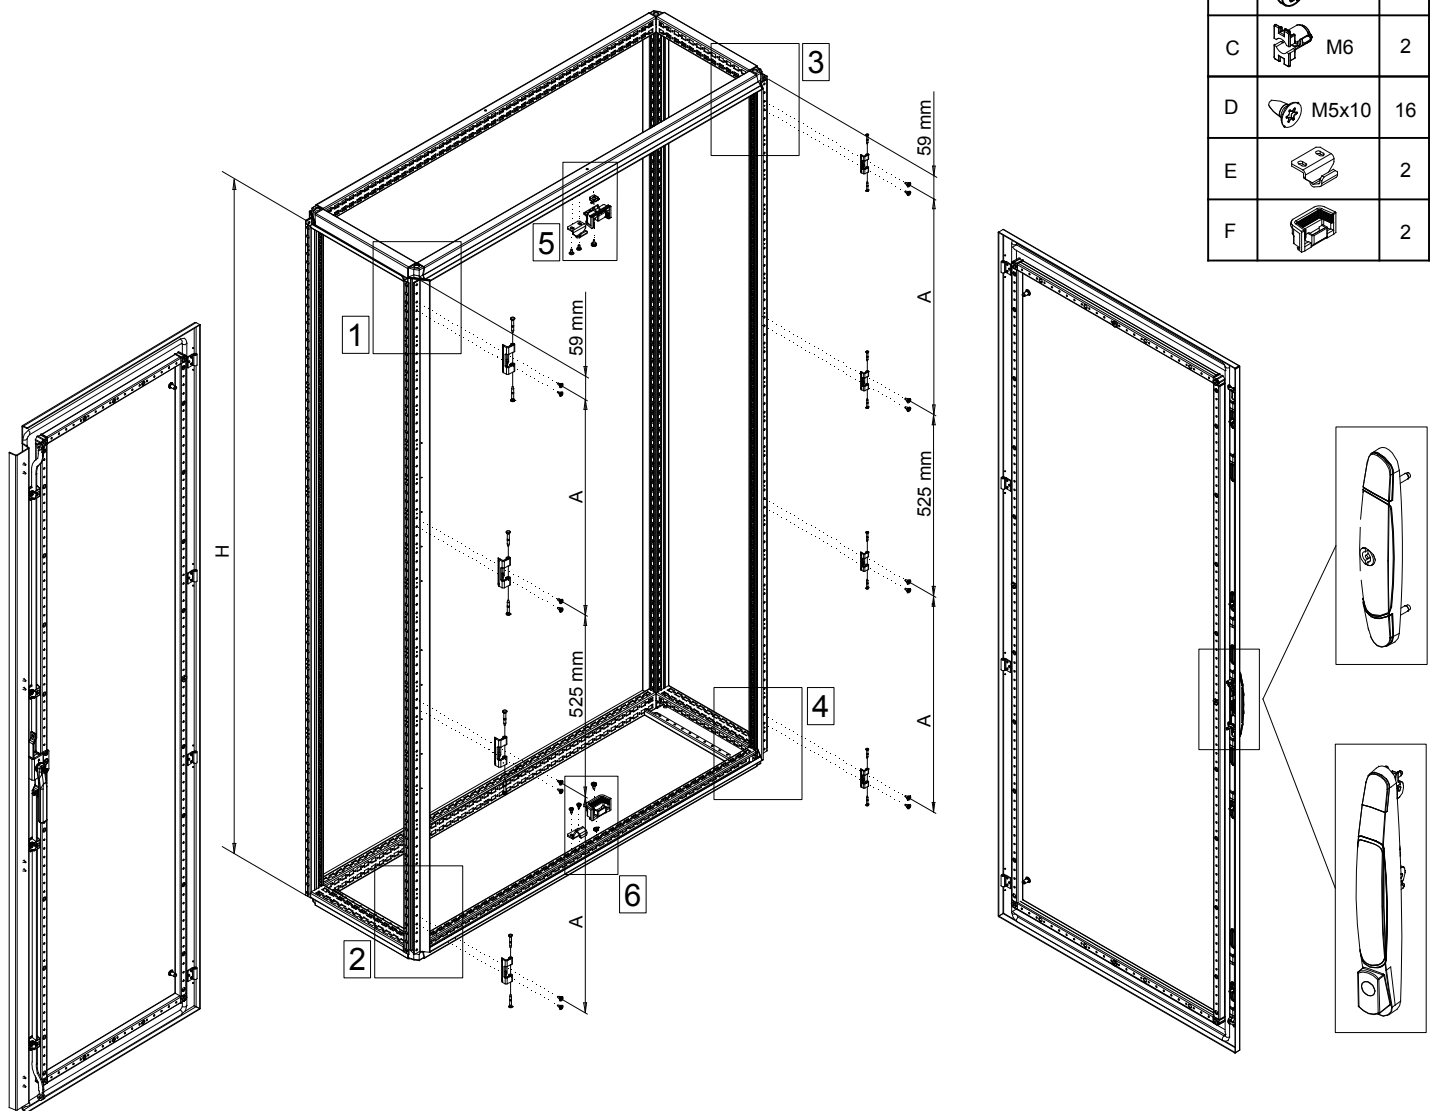







| H    | A   |
|------|-----|
| 1100 | 175 |
| 1400 | 325 |
| 1600 | 425 |
| 1800 | 525 |
| 2000 | 625 |
| 2200 | 725 |

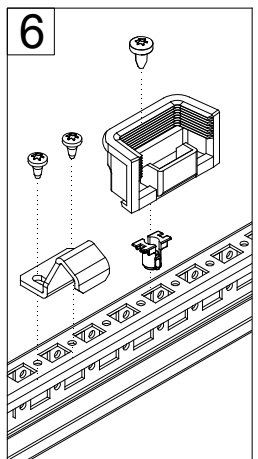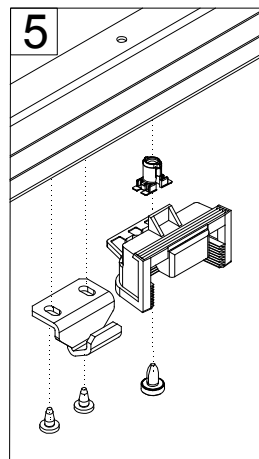




# MOUNTING LSEL

| Ref. | Pic. | Qty. |
|------|------|------|
| A    |      | 6    |
| B    |      | 4    |
| C    |      | 8    |
| D    |      | 1    |
| E    |      | 1    |

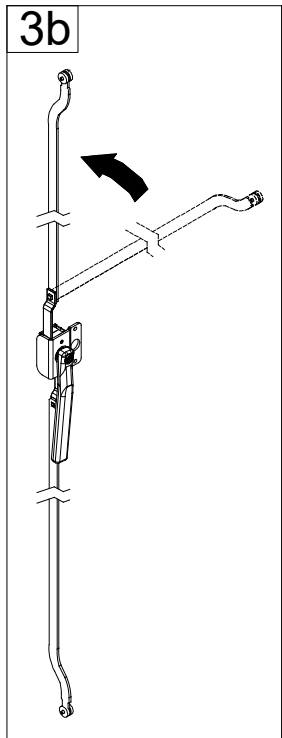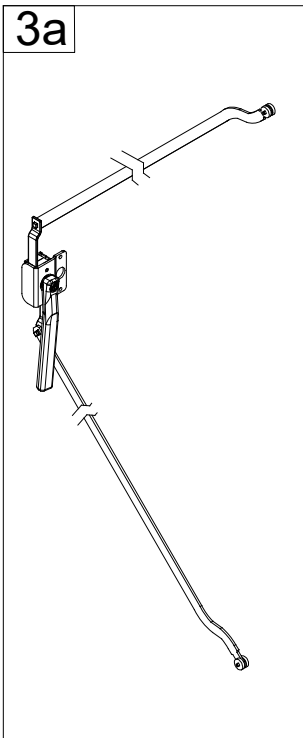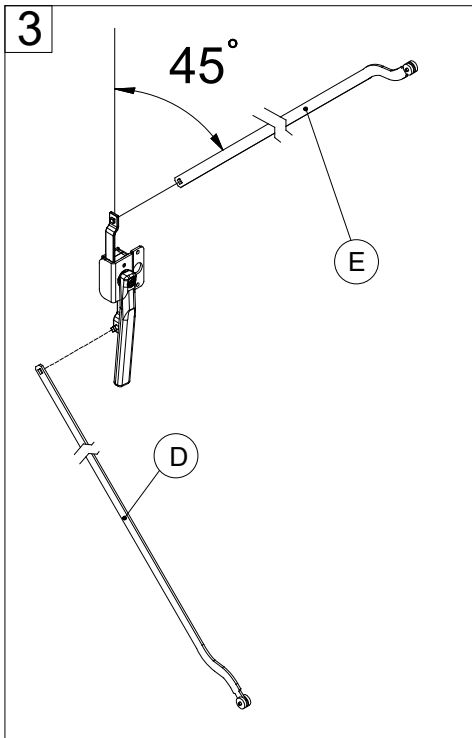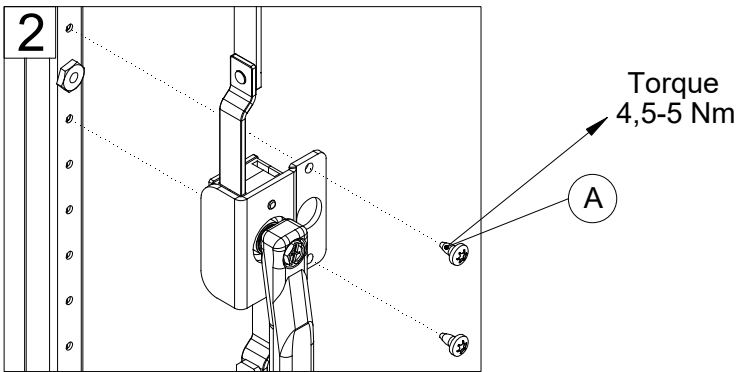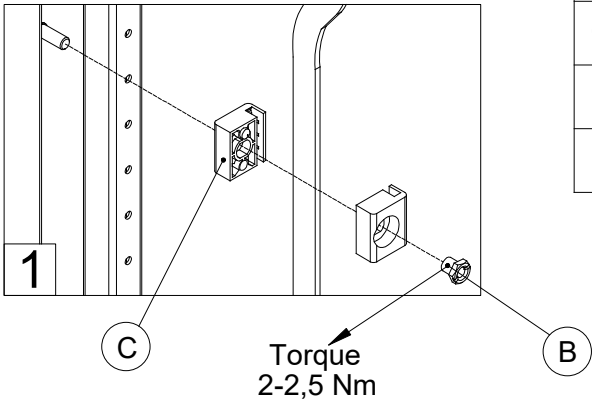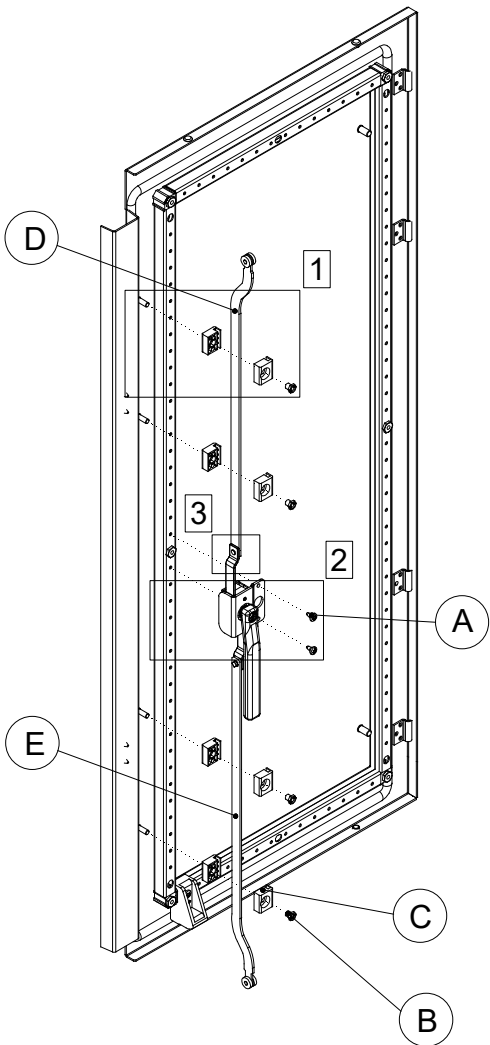




| Ref. | Pic.   | D<br>(mm) | <800 | ≥800 |
|------|--------|-----------|------|------|
| A    | M6x12  |           | 2    | 4    |
| B    | M12x20 |           | 4    | 4    |
| C    | M12    |           | 4    | 4    |

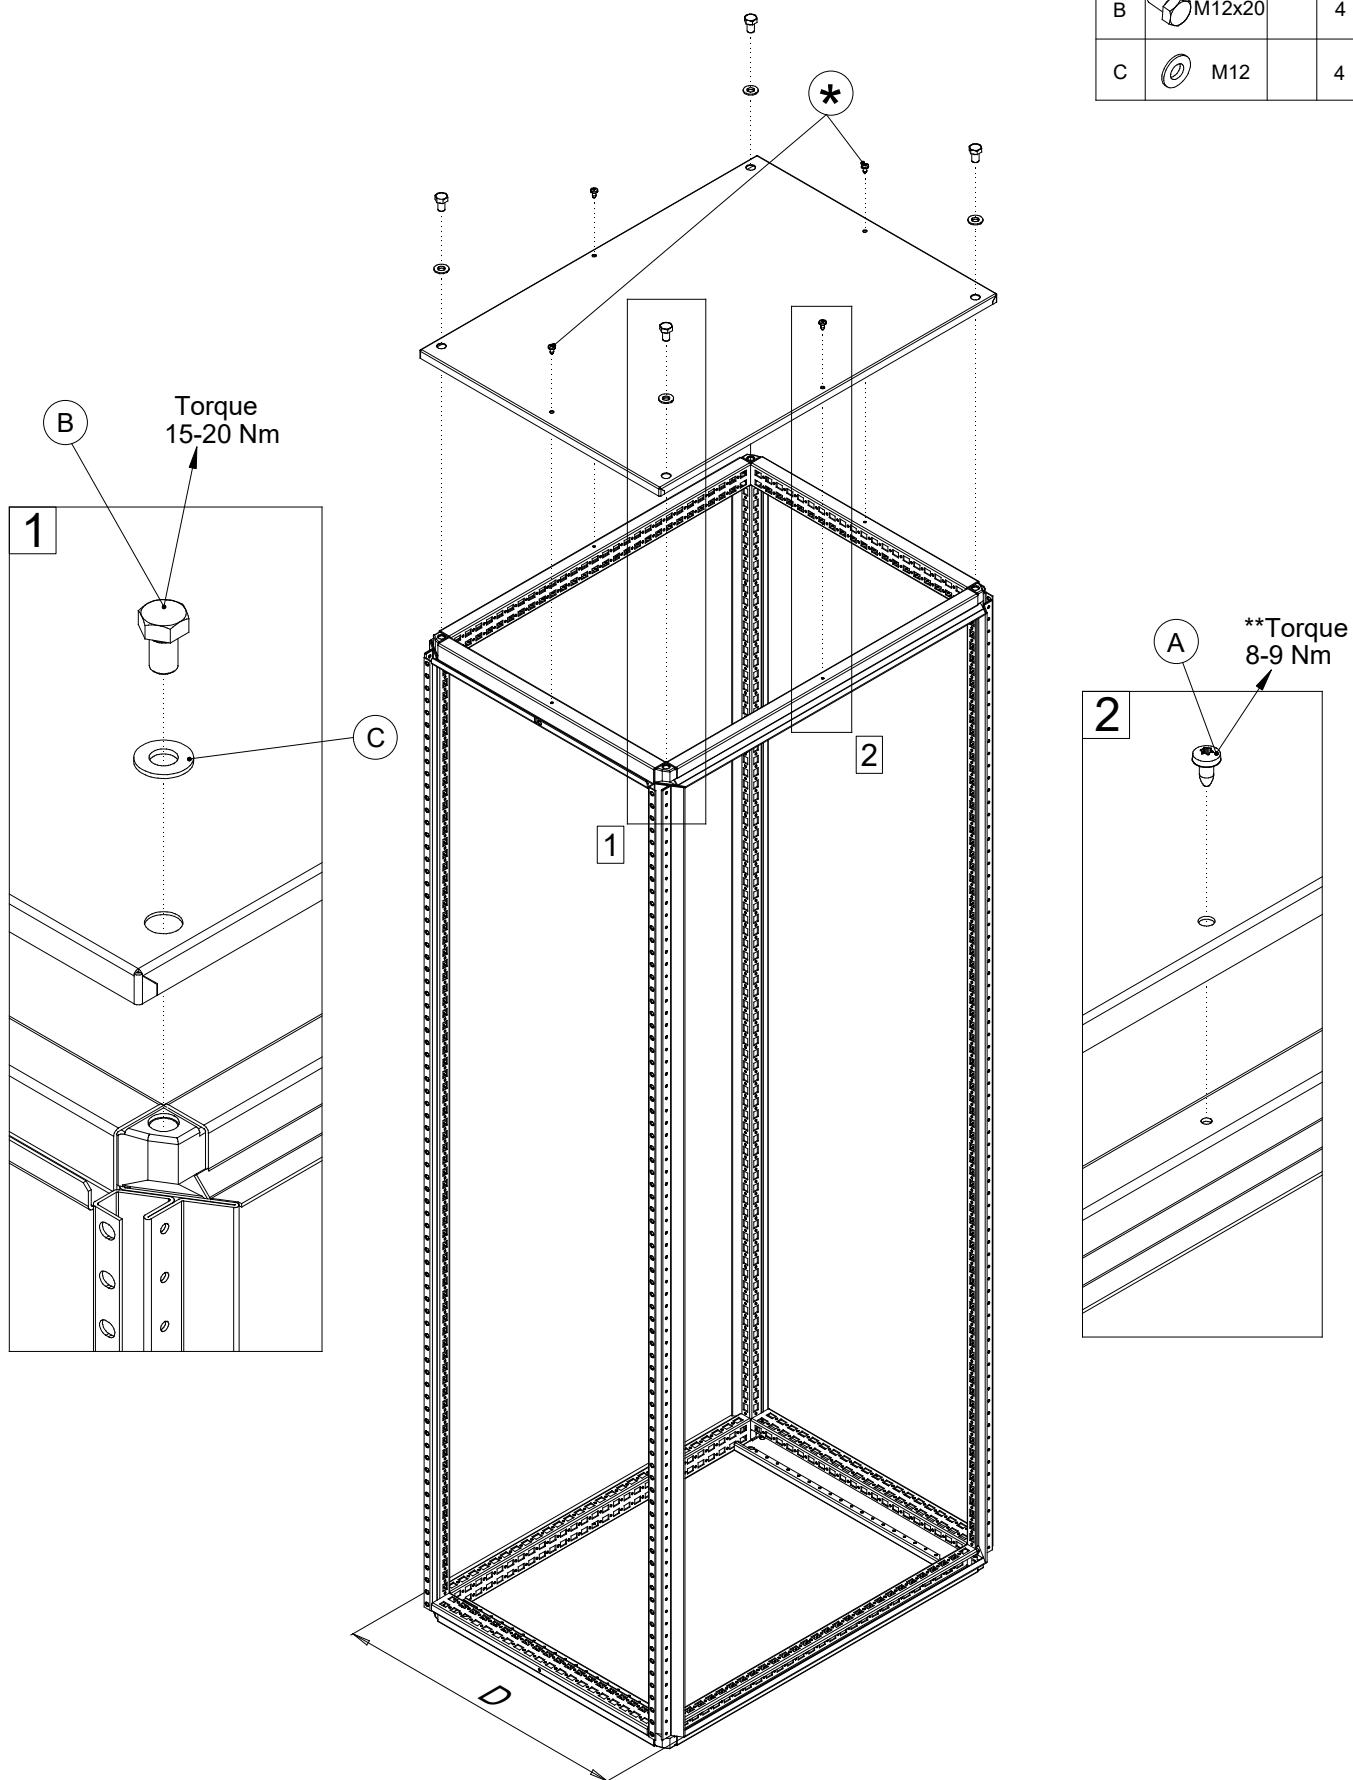


\* - Used on enclosures 800mm deep and above.

\*\* - Torque value for first tightening. For following tightening, torque value recommended is 4-5 Nm.





# MCS BACK PANEL




| Ref. | Pic. | W (mm) | <1000 | ≥1000 |
|------|------|--------|-------|-------|
| A    |      | M5x10  | -     | 2     |
| B    |      | M6x12  | 16    | 18    |

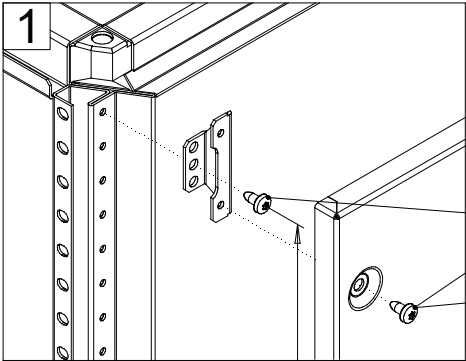

Torque  
4-5 Nm

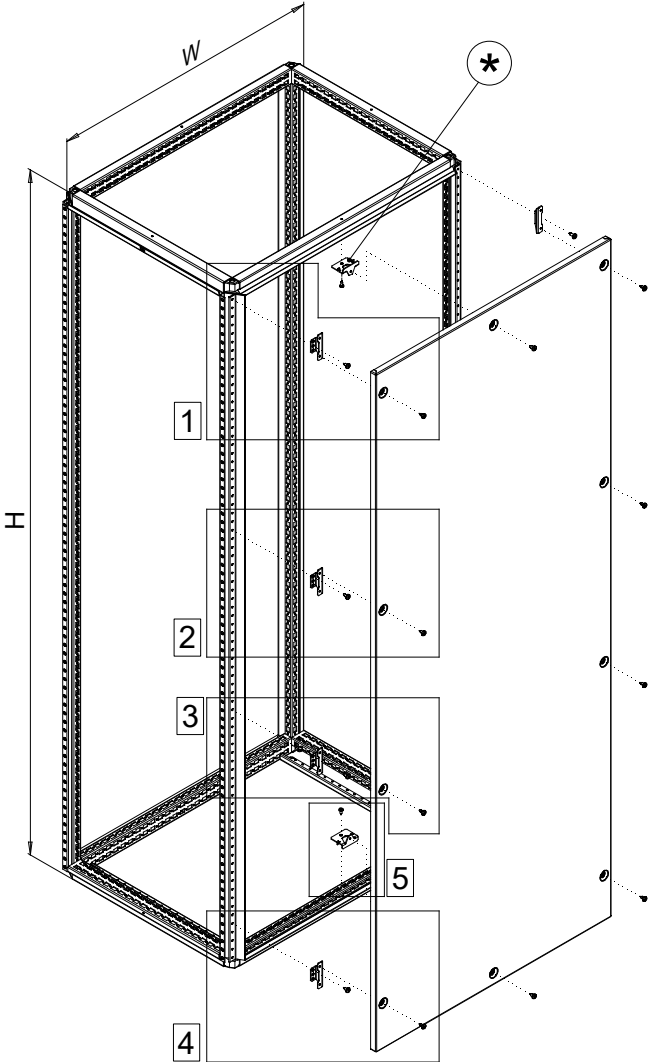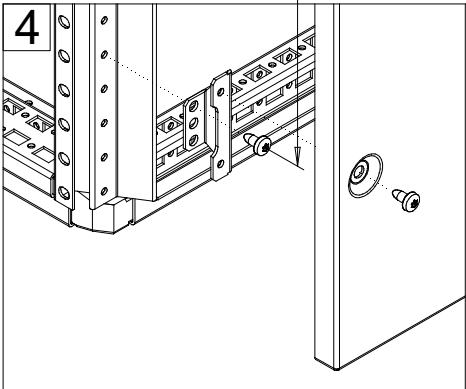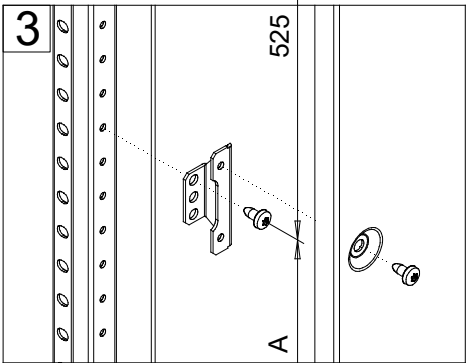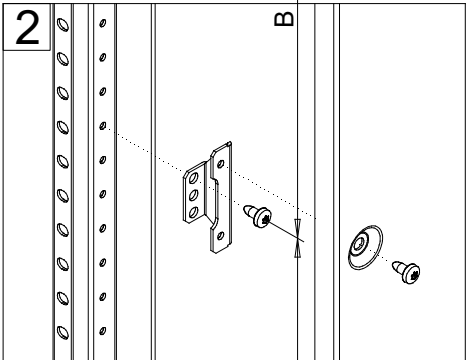


| H    | A   | B   |
|------|-----|-----|
| 1100 | -   | 350 |
| 1400 | 325 | 375 |
| 1600 | 425 | 475 |
| 1800 | 525 | 575 |
| 2000 | 625 | 675 |
| 2200 | 725 | 775 |




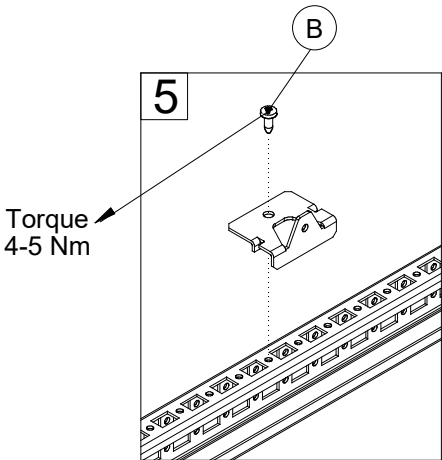


\* - Used on enclosures 1000mm wide and above.

# MKS BACK PANEL



| Ref. | Pic.                                                                                | W<br>(mm) | <1000 | ≥1000 |
|------|-------------------------------------------------------------------------------------|-----------|-------|-------|
| A    |  | M5x10     | -     | 2     |
| B    |  | M6x12     | 22    | 24    |
| C    |  |           | 4     | 4     |

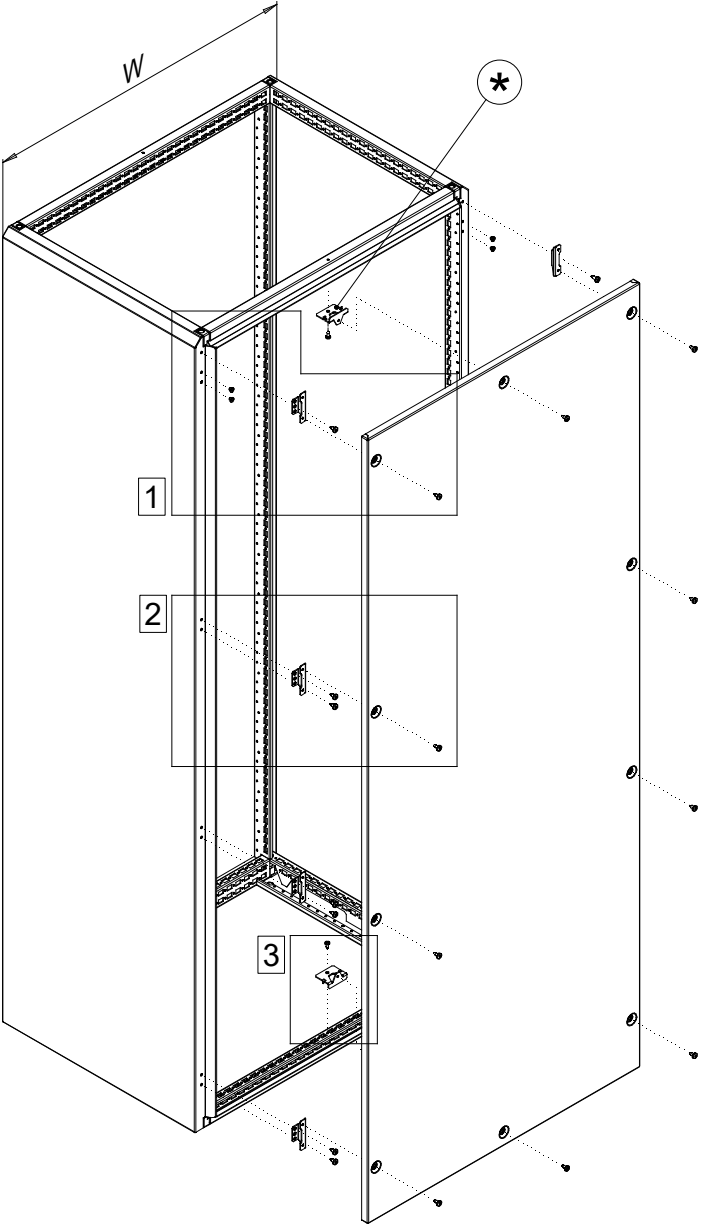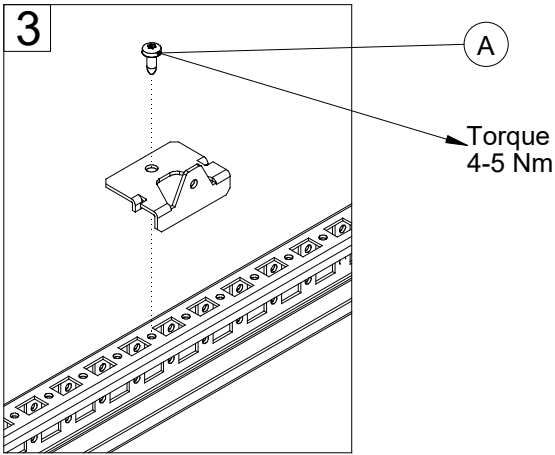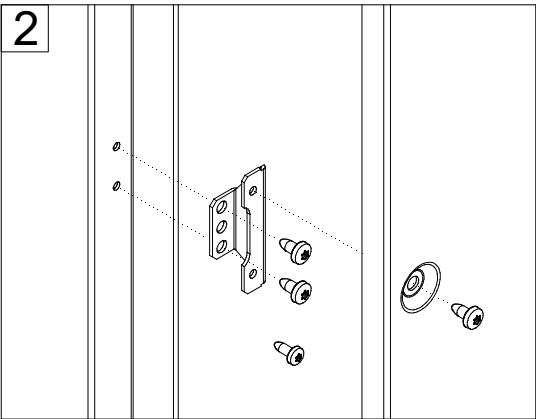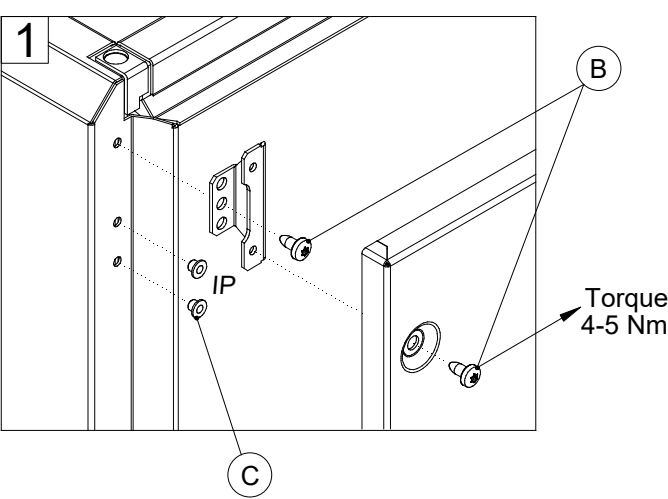


\* - Used on enclosures 1000mm and 1200mm wide.

# MKD BACK PANELS




| Ref. | Pic. | Qty. |
|------|------|------|
| A    |      | 4    |
| B    |      | 28   |
| C    |      | 4    |

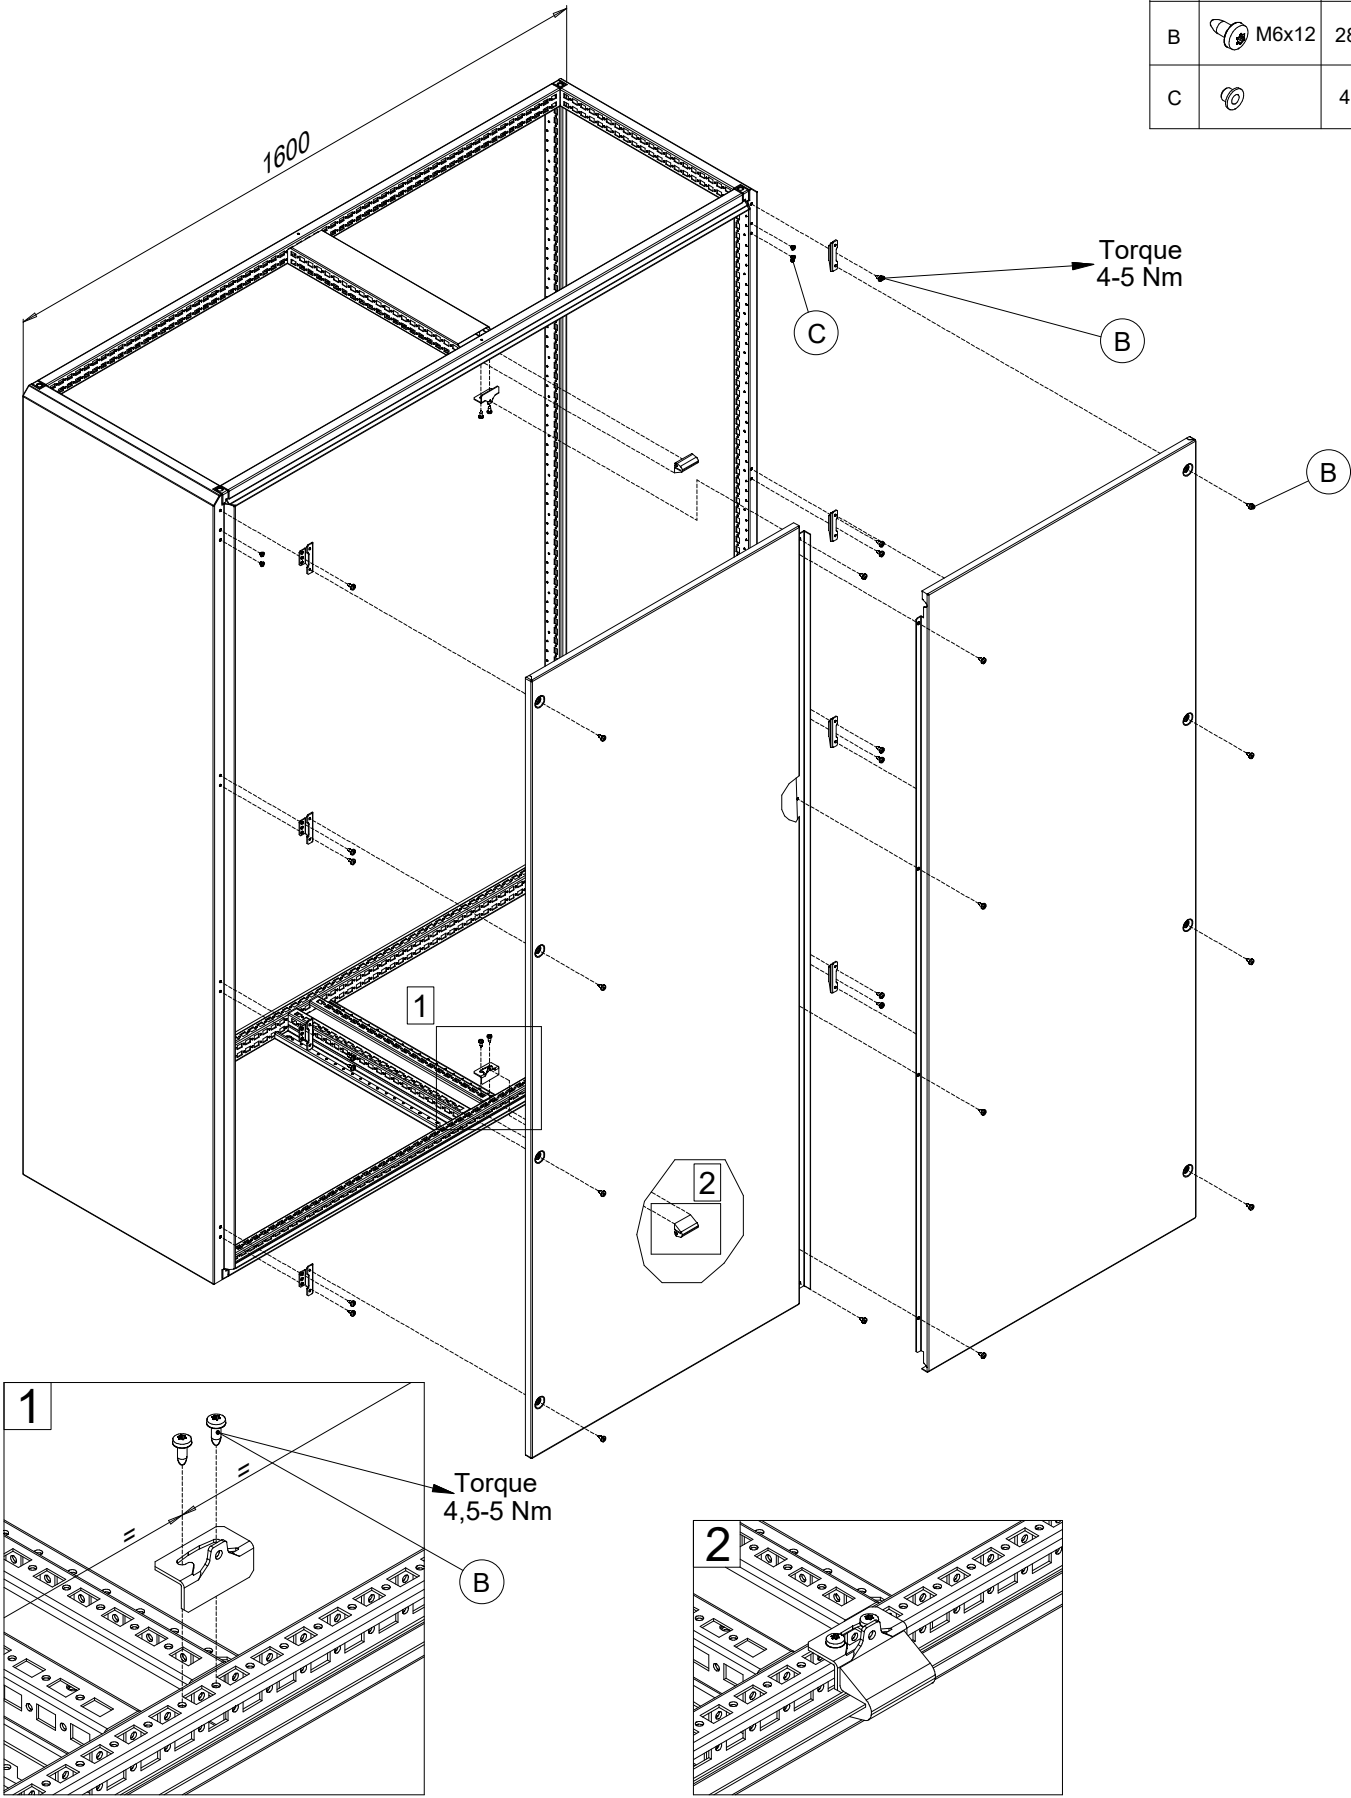



# BOTTOM PLATE

| Ref. | Pic.       | Qty.      |
|------|------------|-----------|
| A    | St. 5.5x10 | 6/8/12/16 |
| B    | M5x10      | 4         |
| C    |            | 5/7/10/14 |

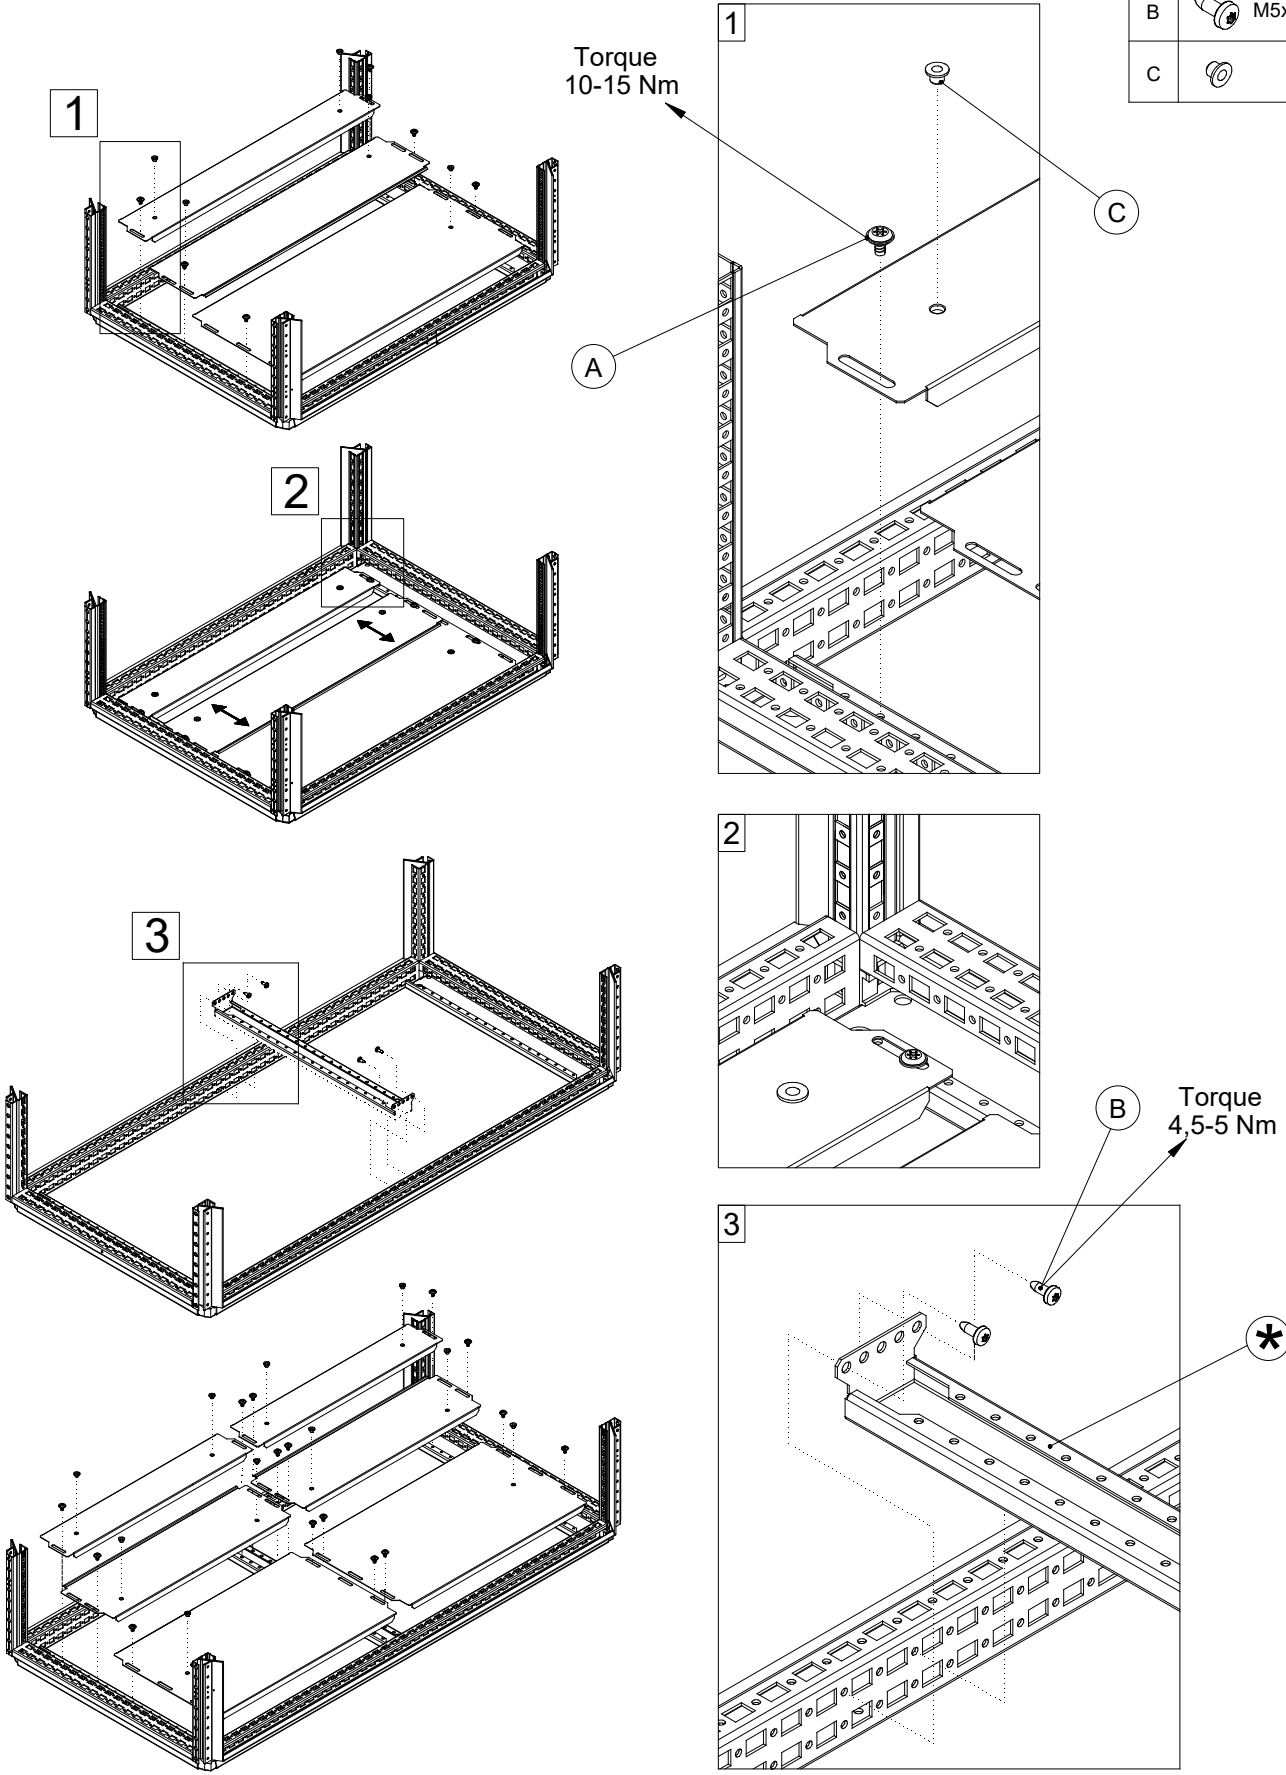


\* - Used only on 1200mm wide enclosures.






# MOUNTING PLATE

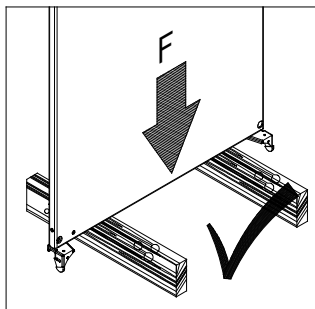


$F > 1000N$

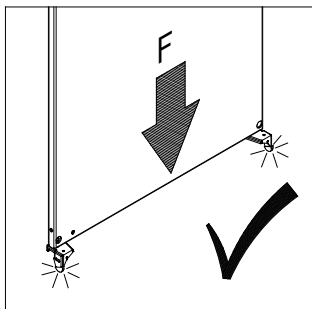








$F \leq 1000N$







| Ref. | Pic.         | Qty. |
|------|--------------|------|
| A    | M8x16        | 2    |
| B    | M8x16        | 2    |
| C    |              | 2    |
| D    | Bottom right | 1    |
| E    | Bottom left  | 1    |
| F    | Top right    | 1    |
| G    | Top left     | 1    |

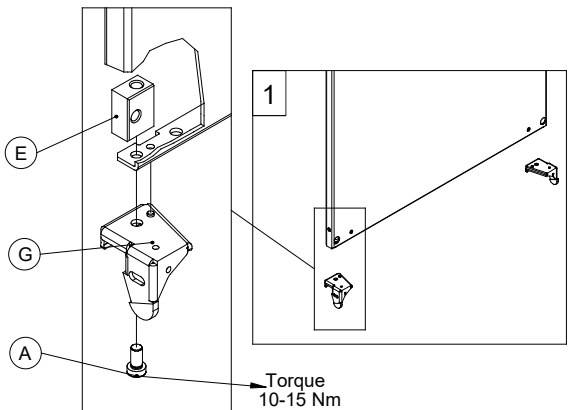

## MOUNTING

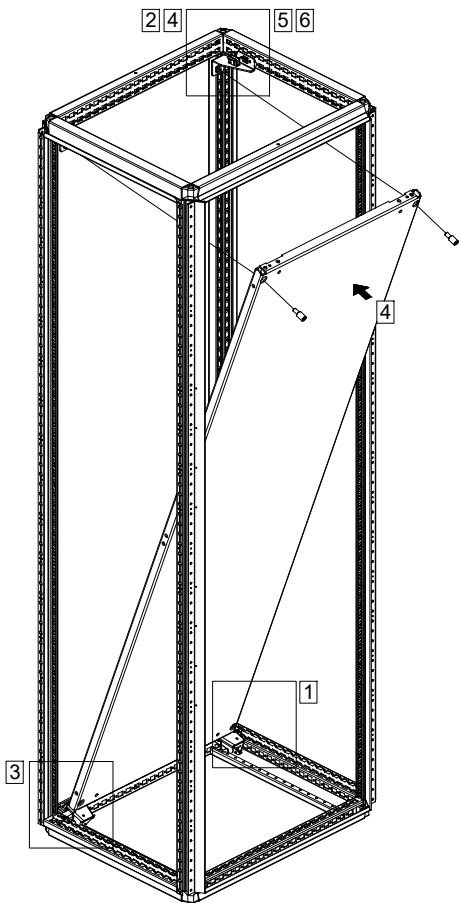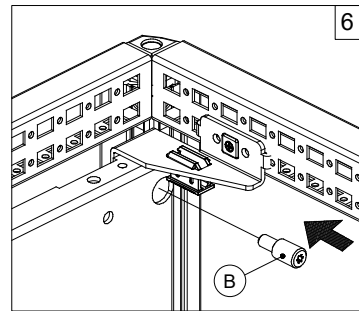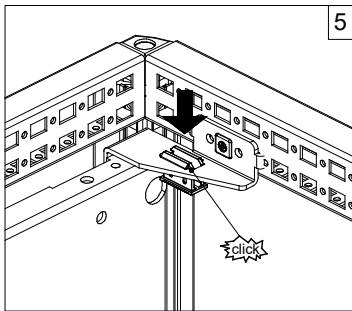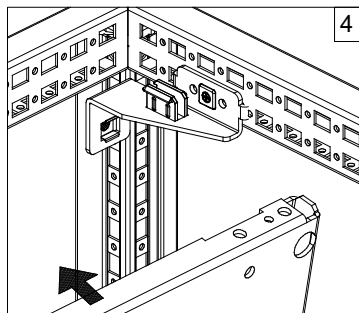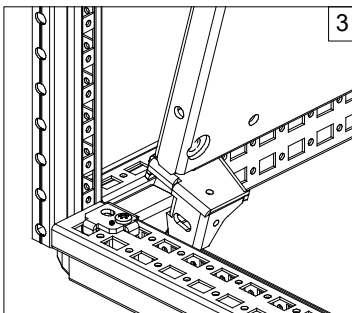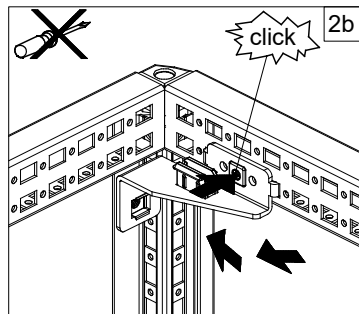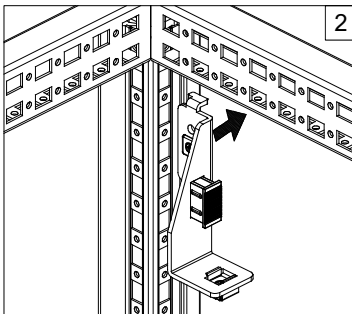


## UNMOUNTING

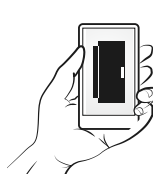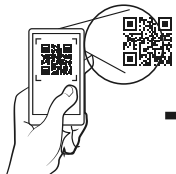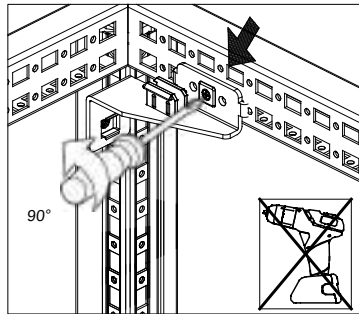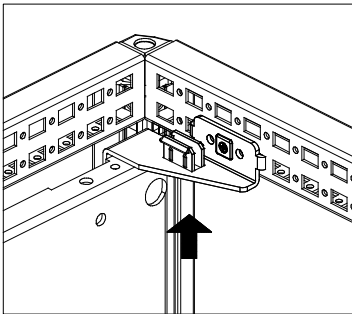

# MOUNTING PLATE 1600 WIDE



| Ref. | Pic.                                                                                             | Qty. |
|------|--------------------------------------------------------------------------------------------------|------|
| A    |  M8x16        | 2    |
| B    |  M8x16        | 2    |
| C    |               | 2    |
| D    |  Bottom right | 1    |
| E    |  Bottom left  | 1    |
| F    |  Top right    | 3    |
| G    |  Top left     | 3    |
| H    |  M8x40        | 4    |

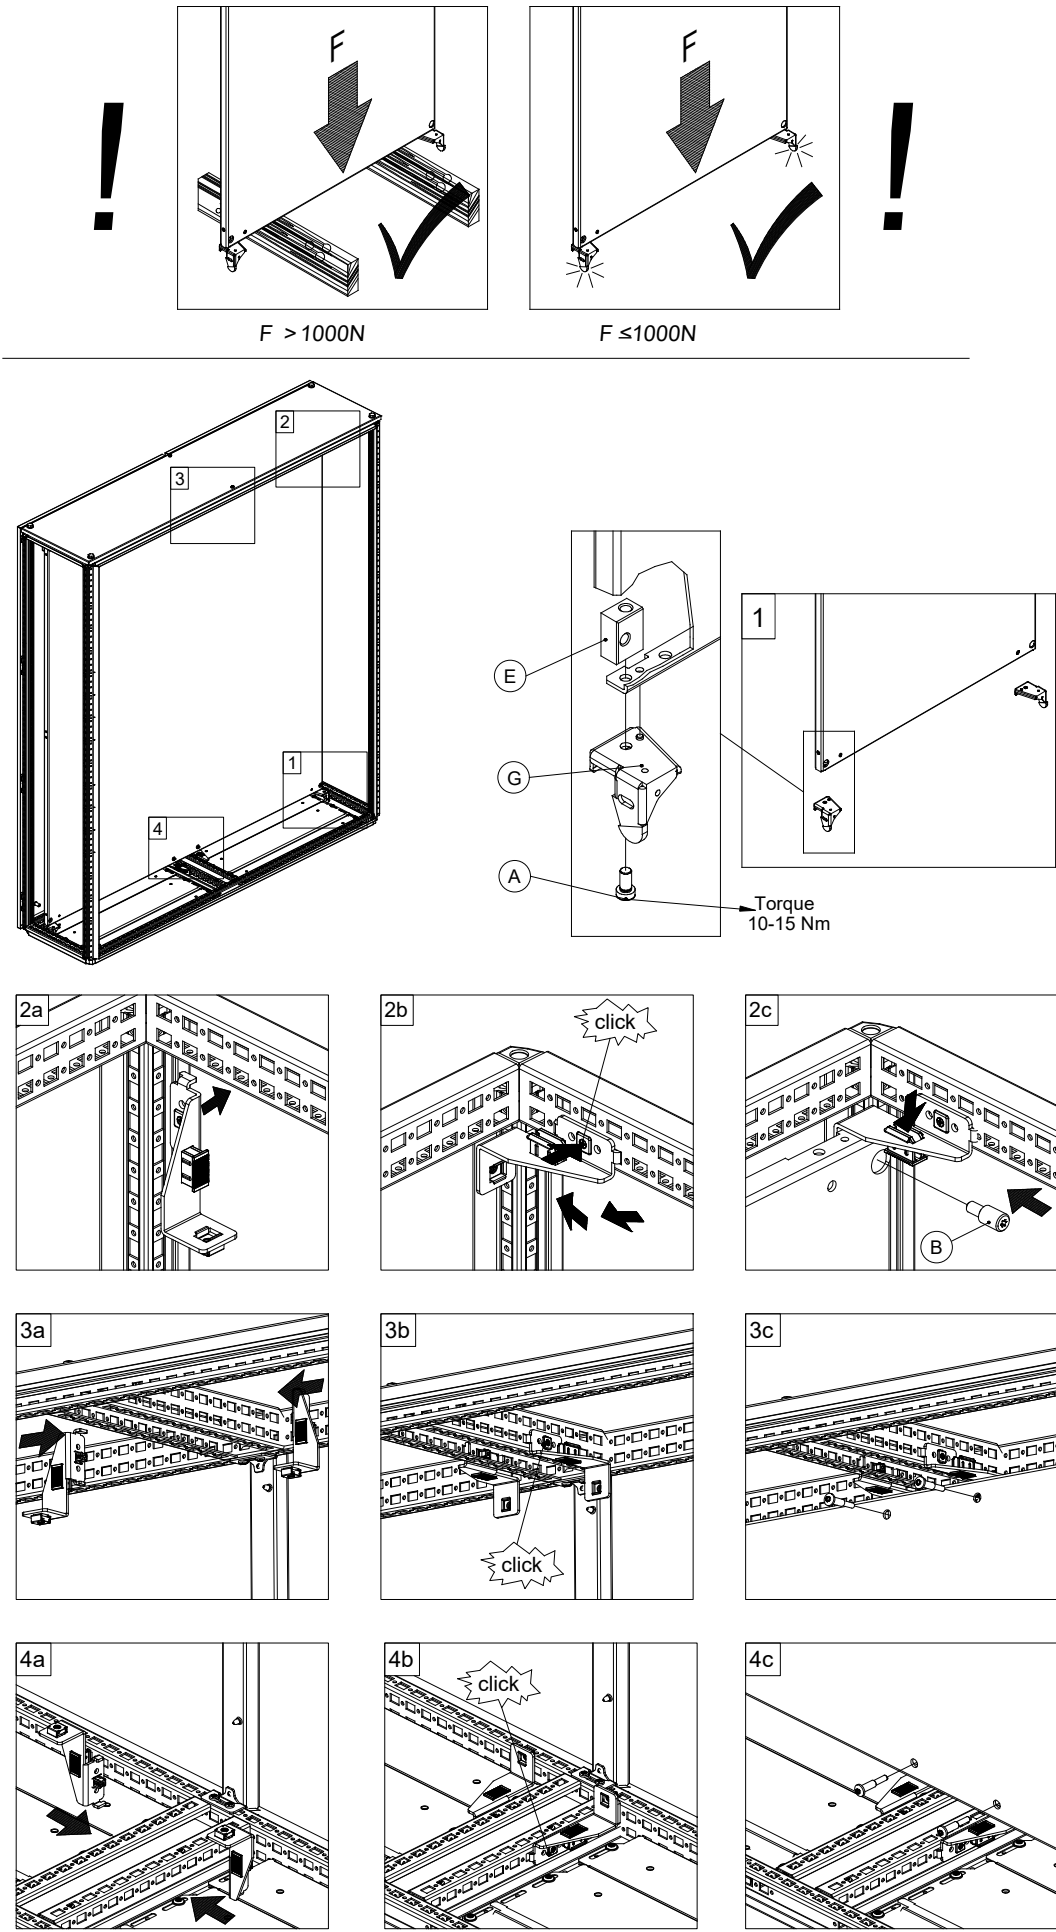









# MPD02

| Ref. | Pic.         | Qty. |
|------|--------------|------|
| A    | M5X12        | 2    |
| B    | Bottom left  | 1    |
| C    | Bottom right | 1    |



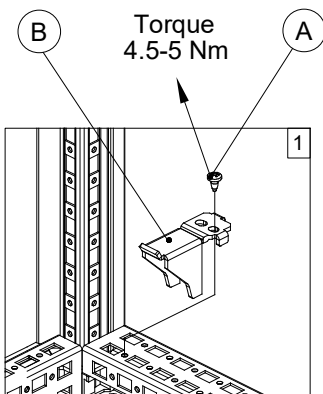
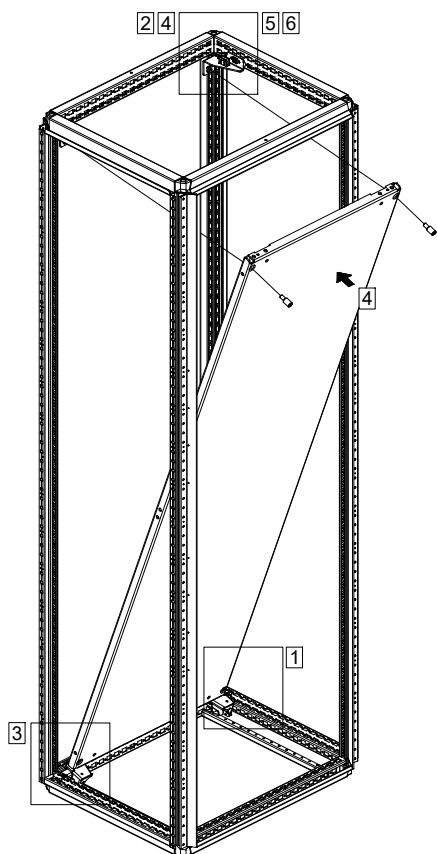


## MOUNTING

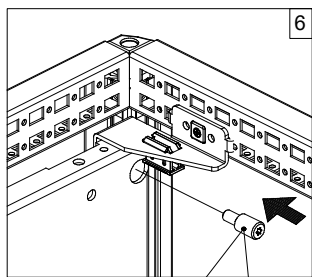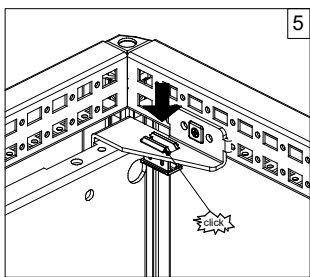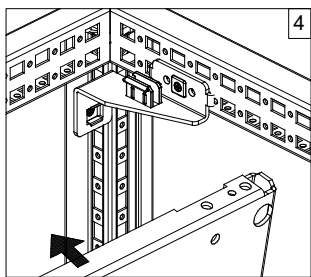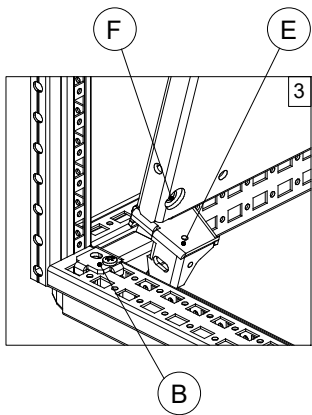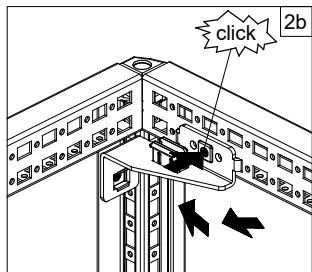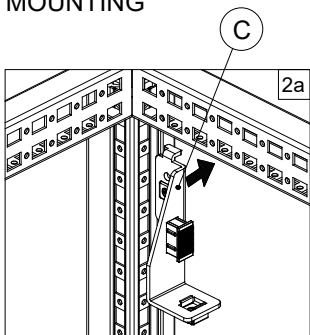

D Torque 4.5-5 Nm


## UNMOUNTING

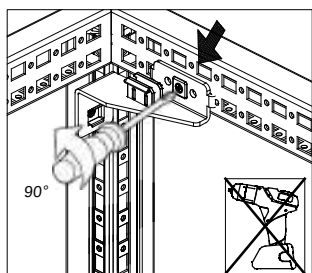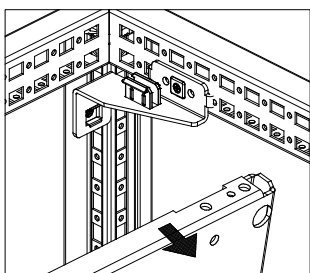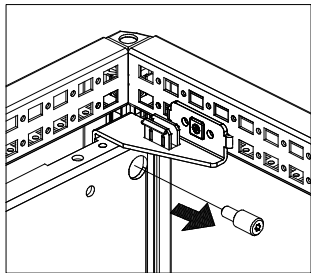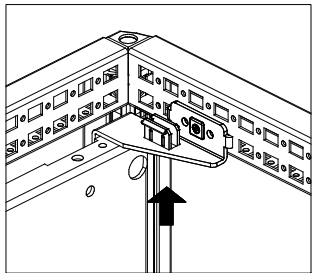

# SPM


| Ref. | Pic.                                                                                      | Qty.  |
|------|-------------------------------------------------------------------------------------------|-------|
| A    |        | 6/8/9 |
| B    |  M4x14 | 6/8/9 |
| C    |        | 2     |

## Side panel mounting

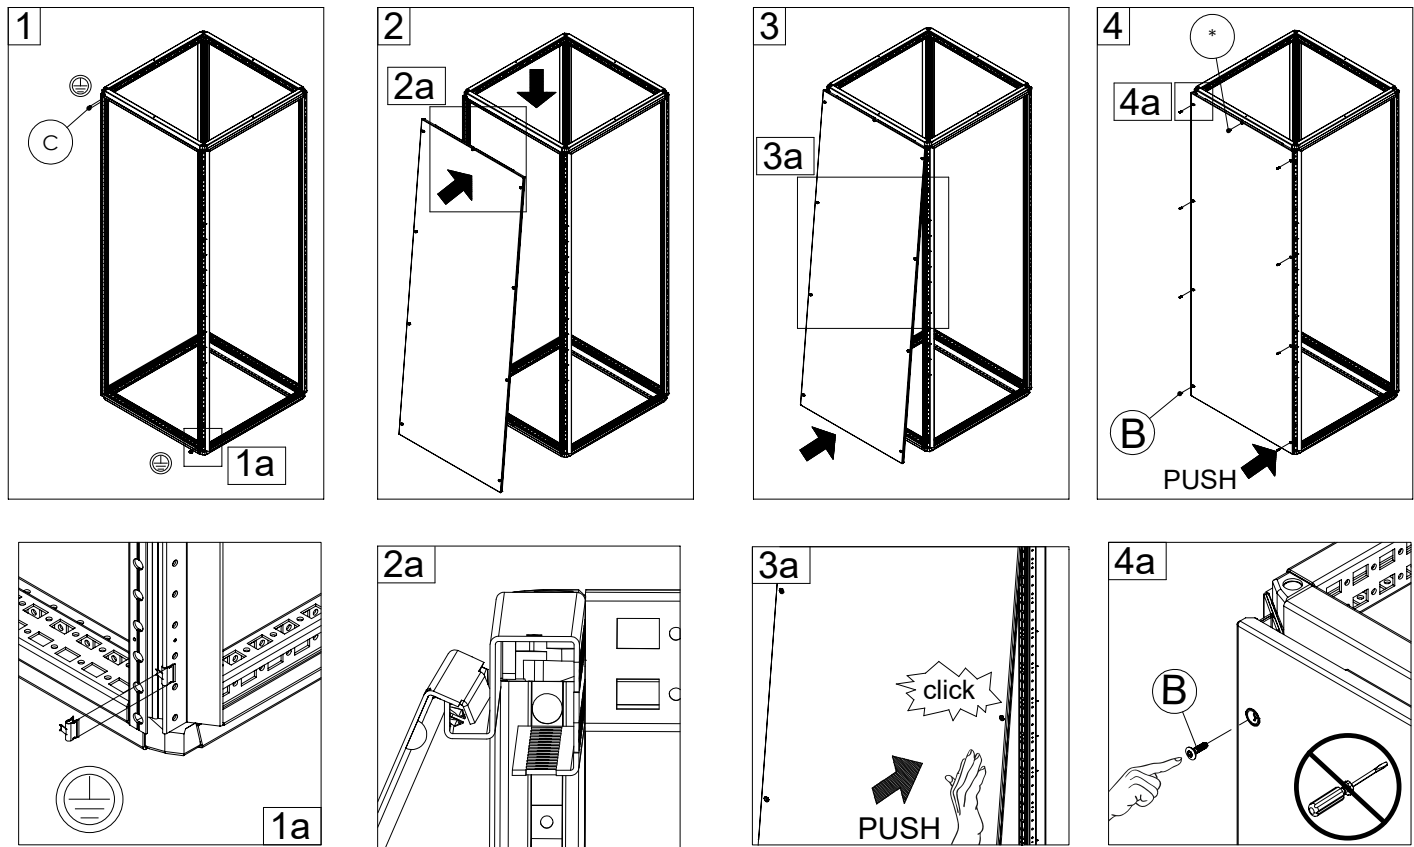

\* - Used only on enclosures 800 mm deep and above.

## Retainer mounting




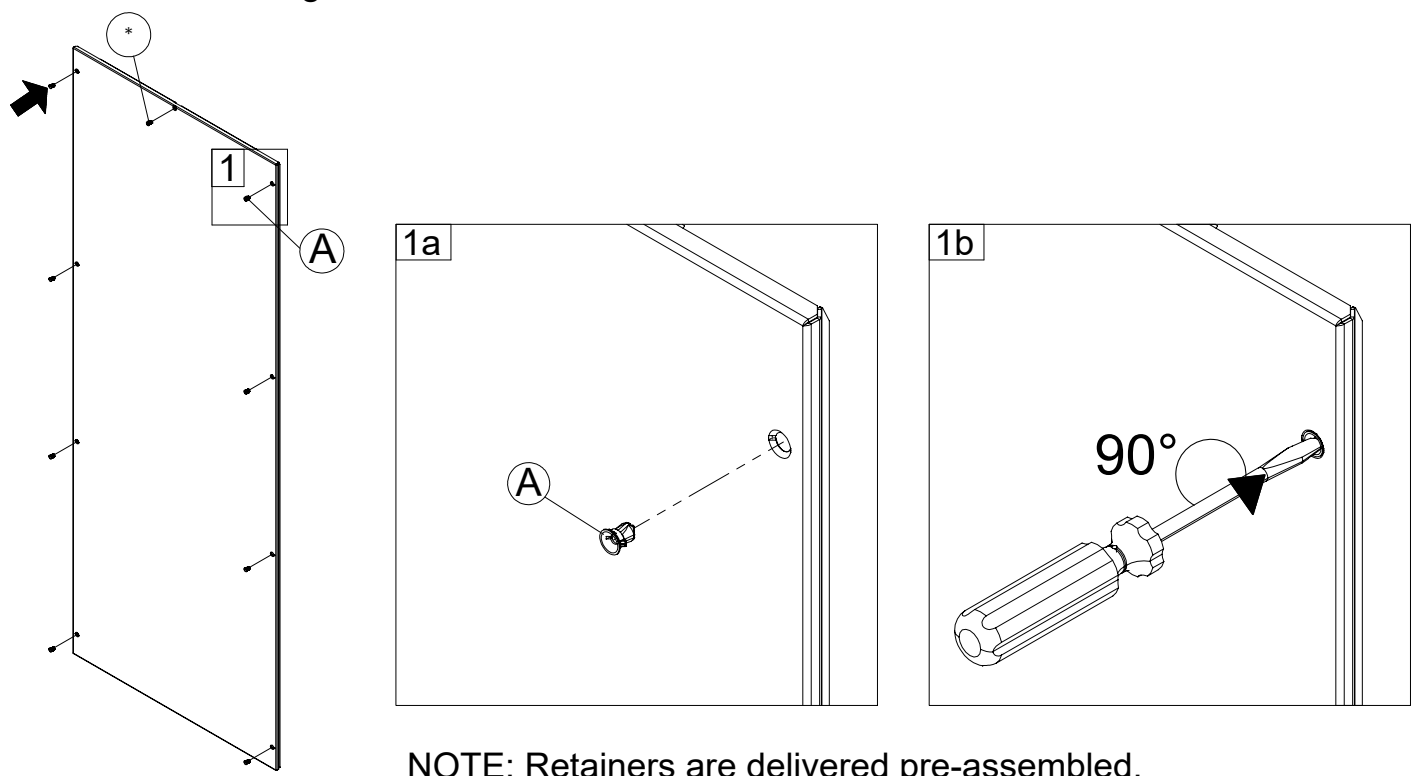


NOTE: Retainers are delivered pre-assembled.

SPM







| Ref. | Pic.                                                                                      | Qty. |
|------|-------------------------------------------------------------------------------------------|------|
| A    |        | 1    |
| B    |  M6x16 | 1    |
| C    |        | 1    |

For the old design frame (800 mm in depth or more), the following additional steps are required:

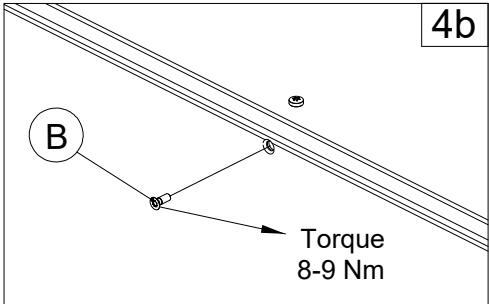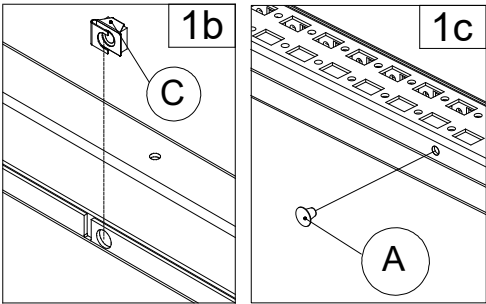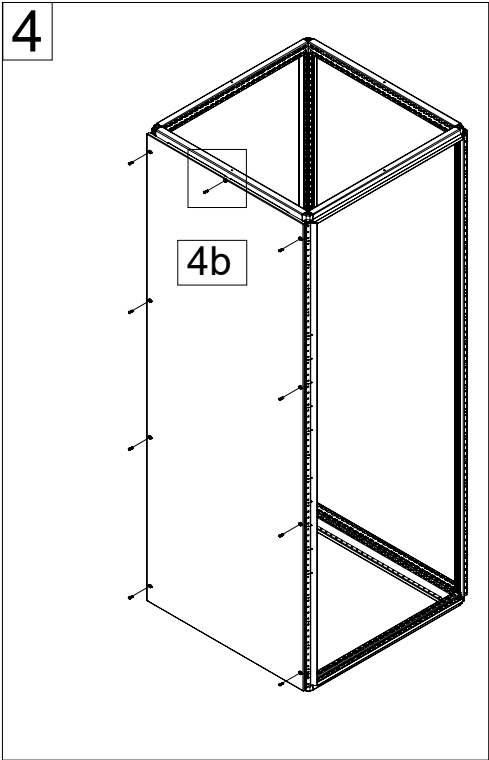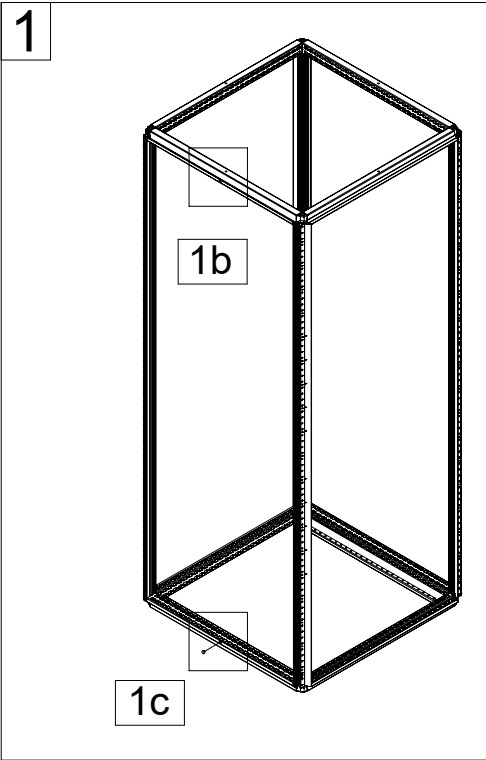







| Ref. | Pic. | Qty. |
|------|------|------|
| A    |      | 8    |
| B    |      | 6    |
| C    |      | 12   |
| D    |      | 6    |

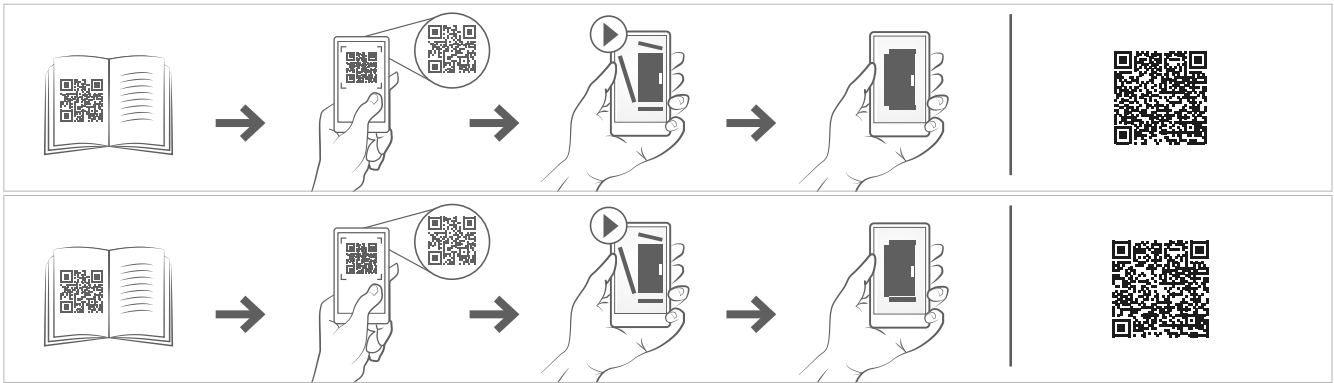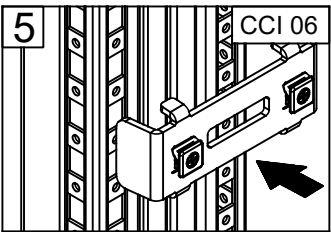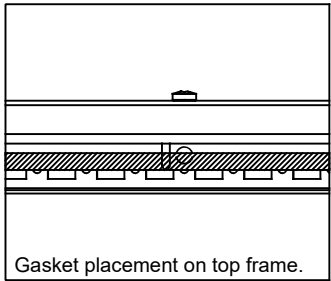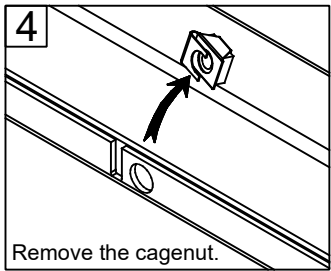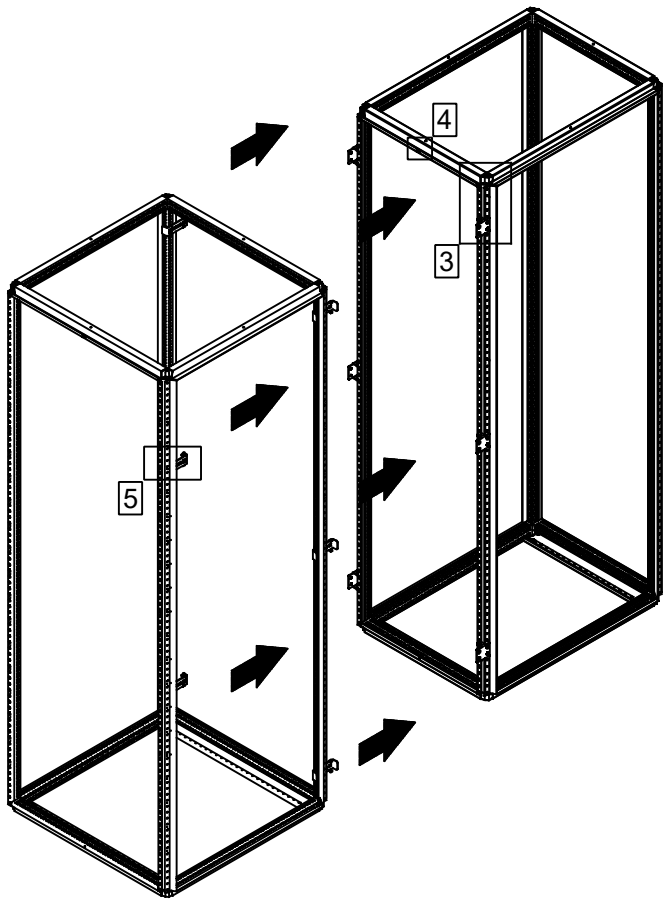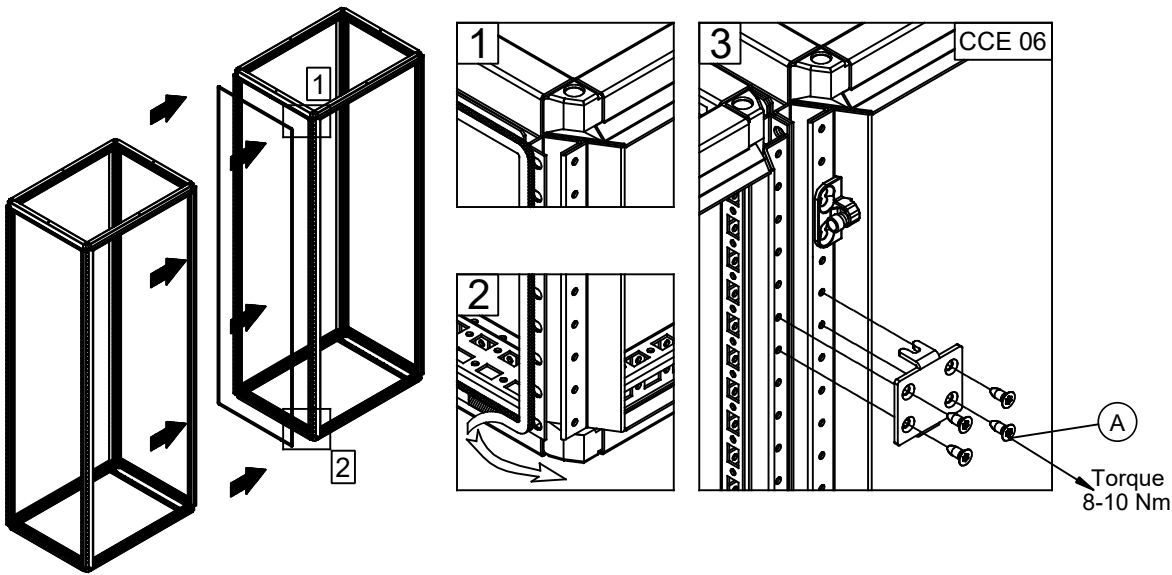



| Ref. | Pic. | Qty. |
|------|------|------|
| A    |      | 4    |
| B    |      | 4    |
| C    |      | 2    |
| D    |      | 4    |

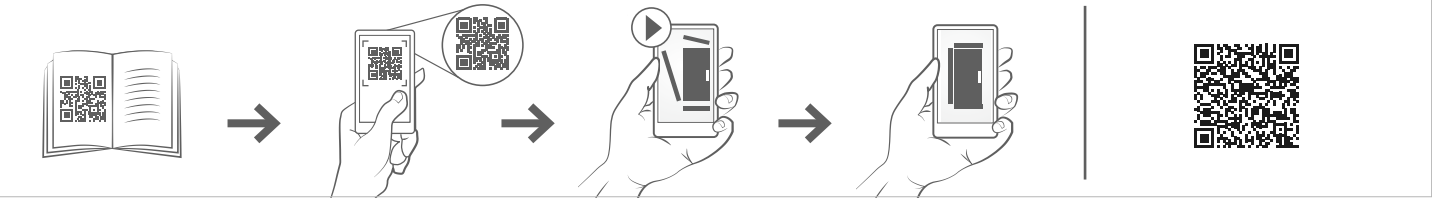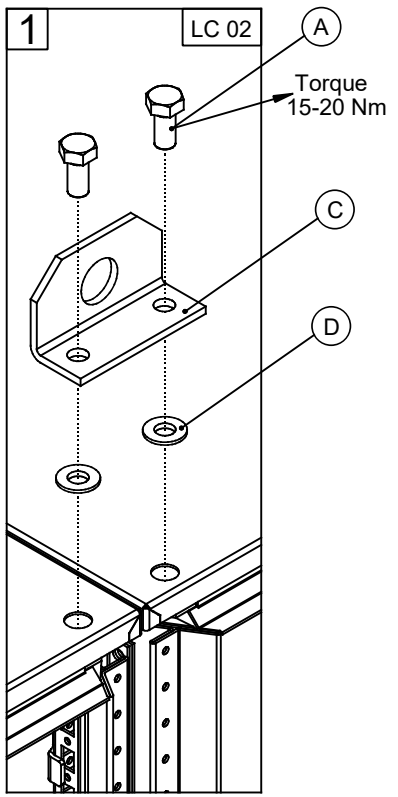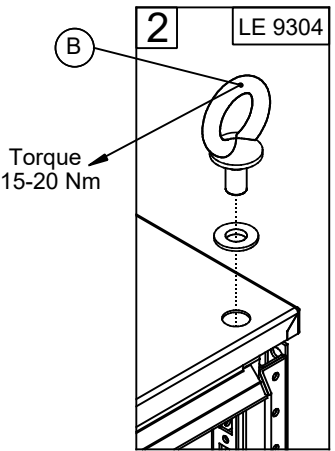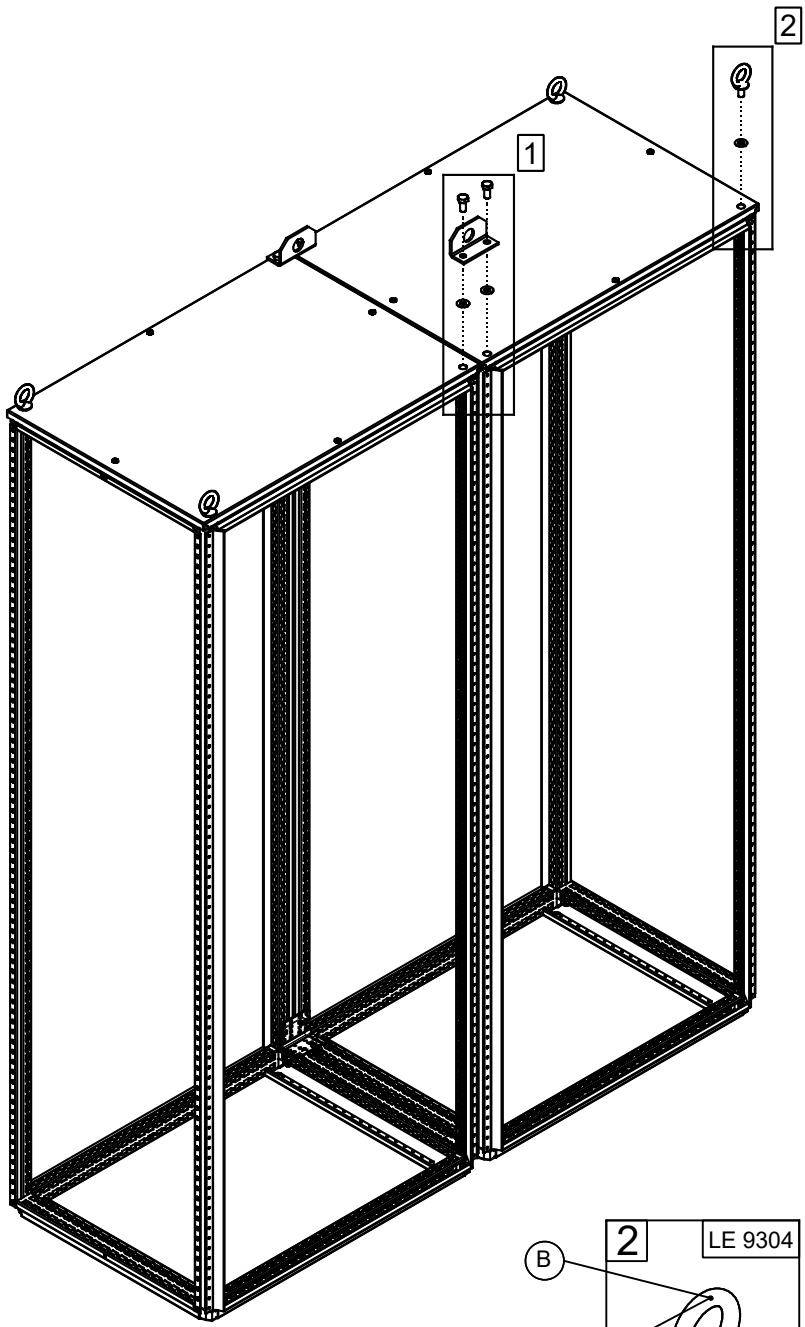

















# CCM 04

| Ref. | Pic. | Qty. |
|------|------|------|
| A    |      | 4    |
| B    |      | 8    |

## MOUNTING

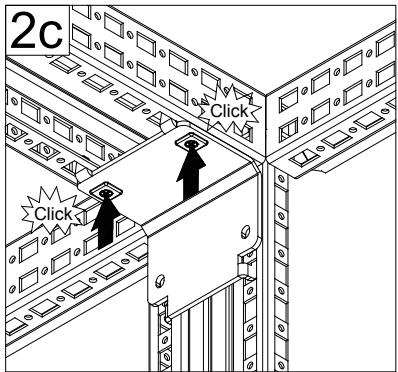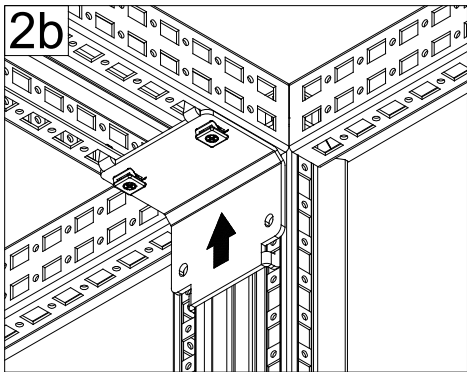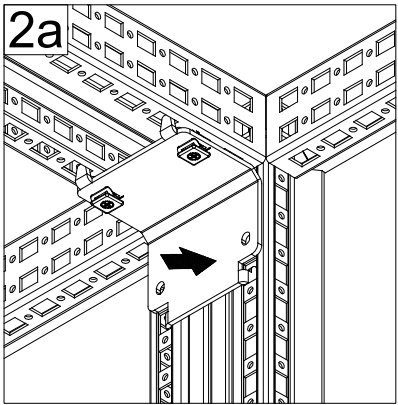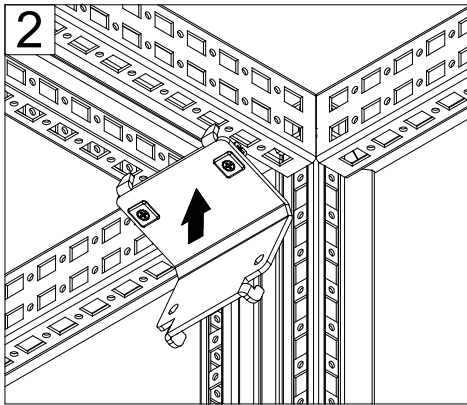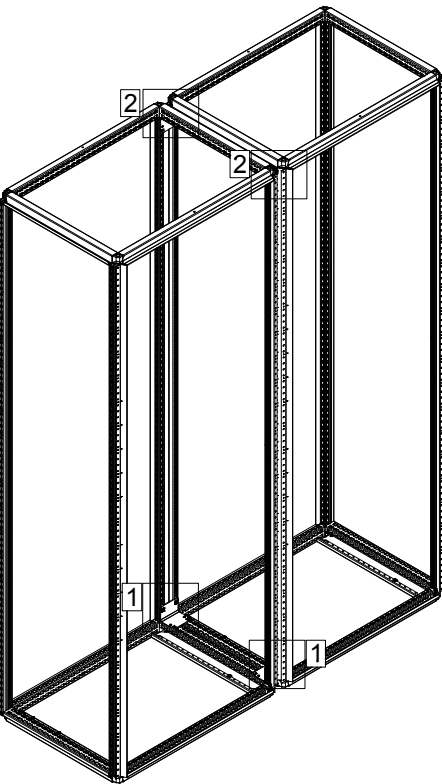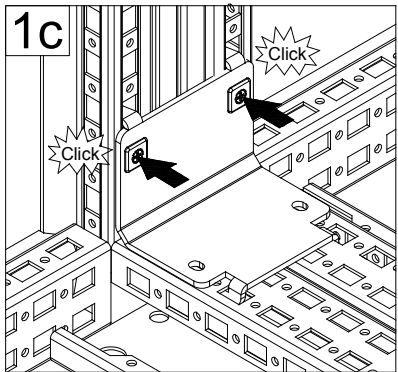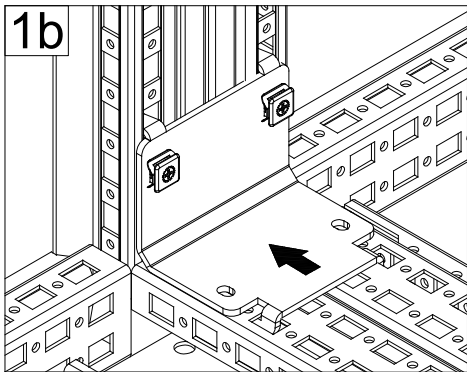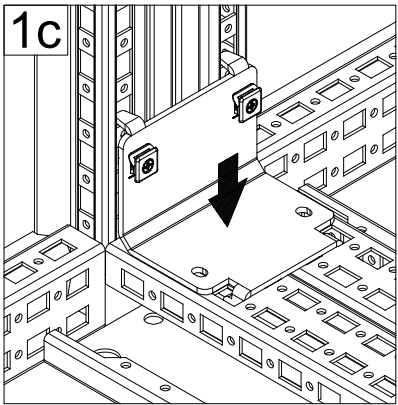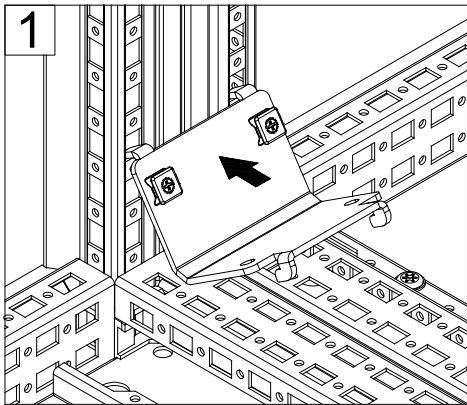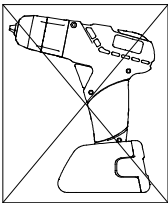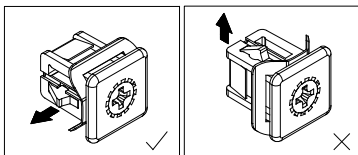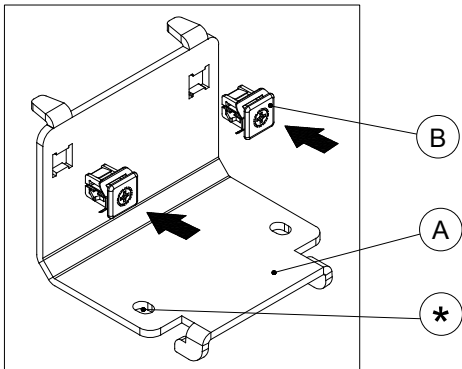











Note: It is mandatory for all four brackets to be installed at all four corners !

★ The fixation holes can be used to better fix the bracket to the frame,using cage nuts and screws !




MPF


| Ref. | Pic.                                                                                | Qty. |
|------|-------------------------------------------------------------------------------------|------|
| A    |  | 1    |
| B    |  | 1    |
| C    |  | 2    |
| D    |  | 2    |

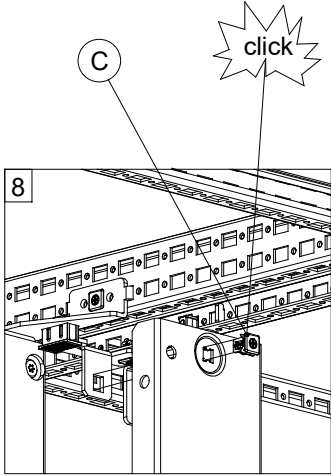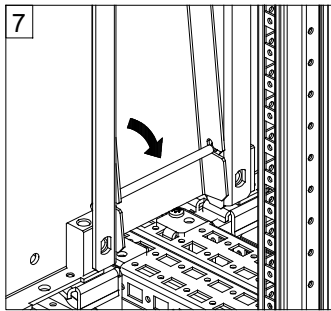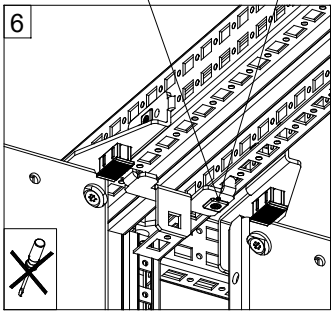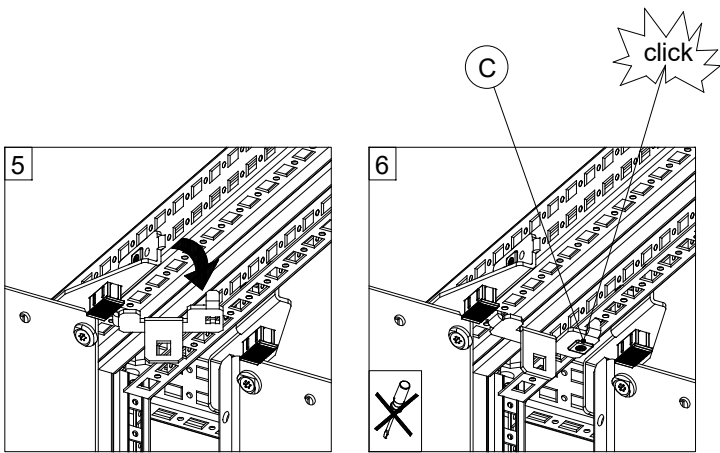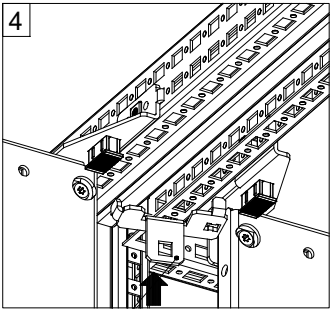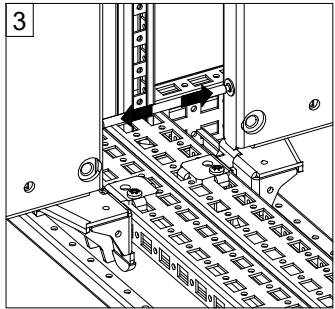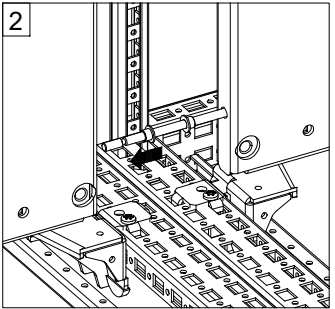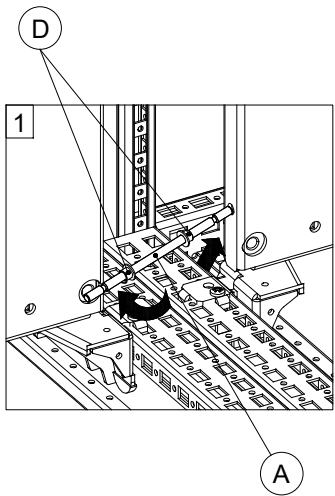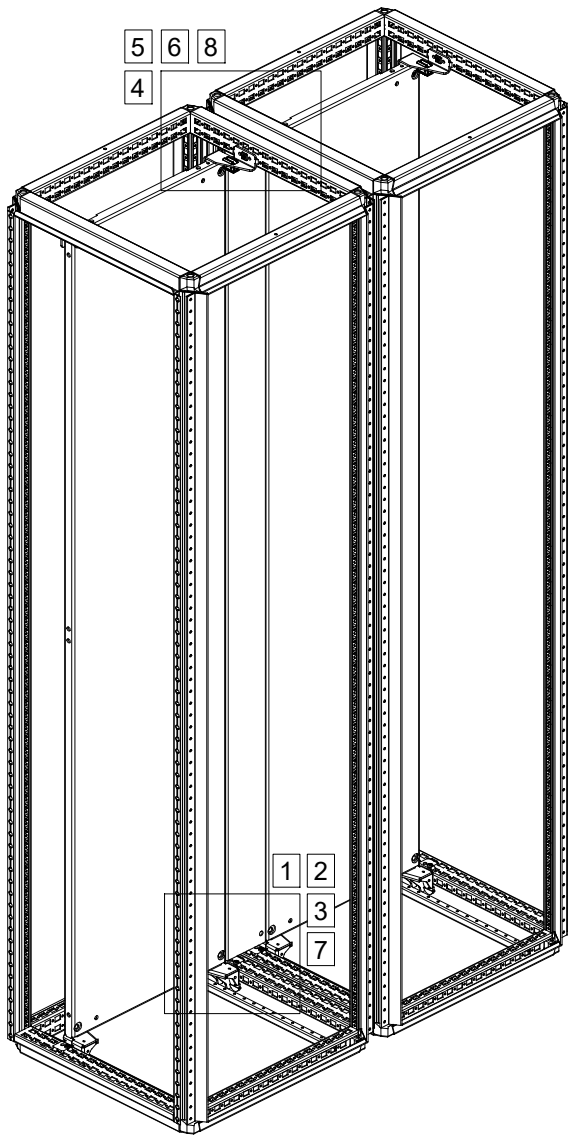







Back view

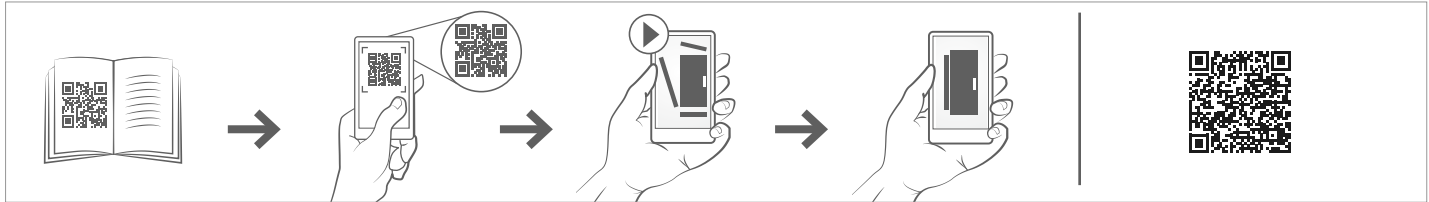

# DHN 180












| Ref. | Pic. | Qty. |
|------|------|------|
| A    |      | 8    |

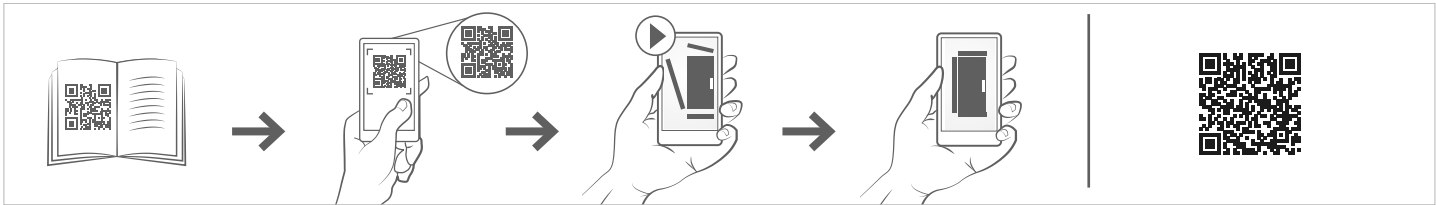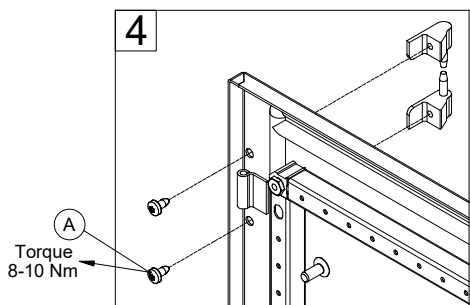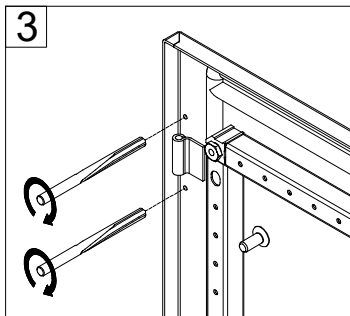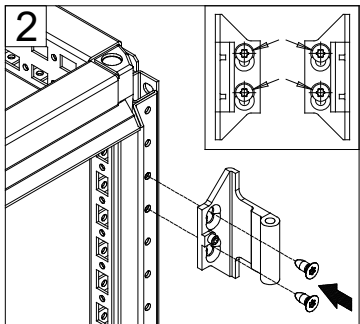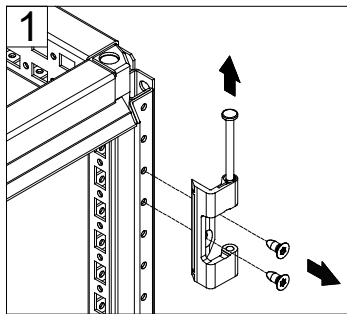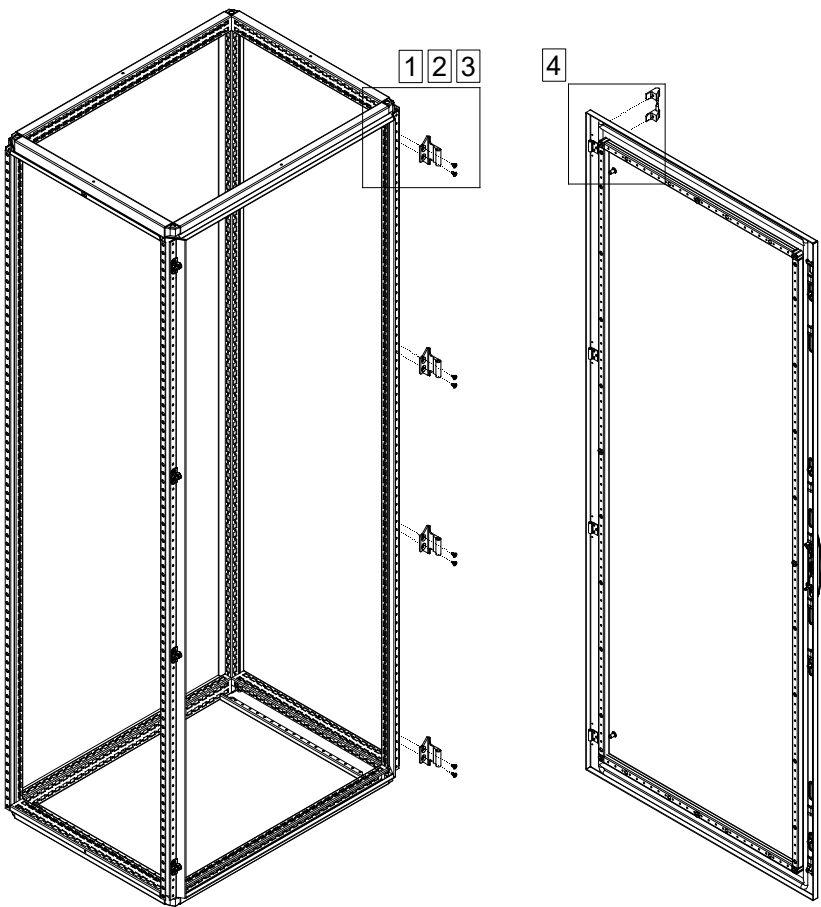









# DHN 180 DOOR ADJUSTMENT

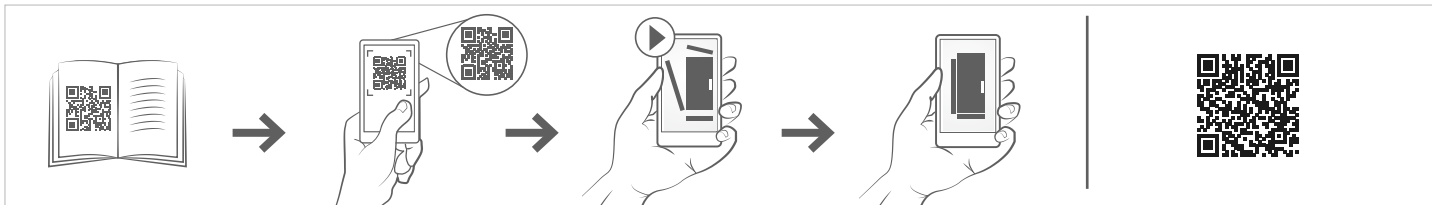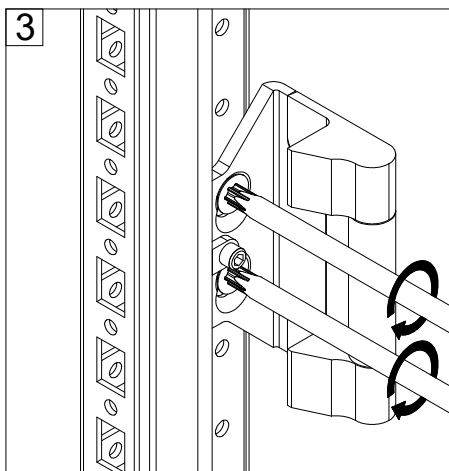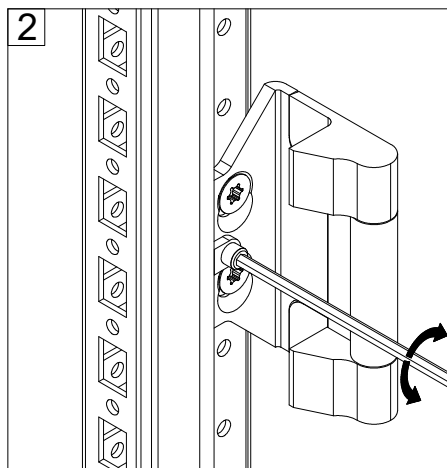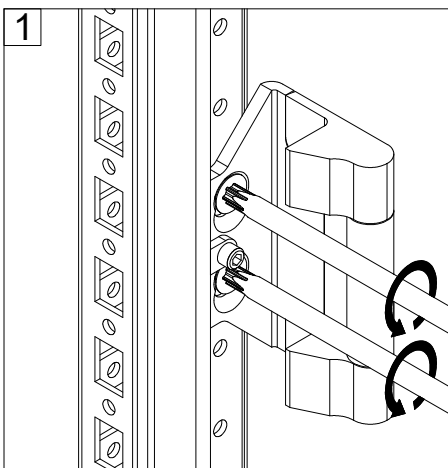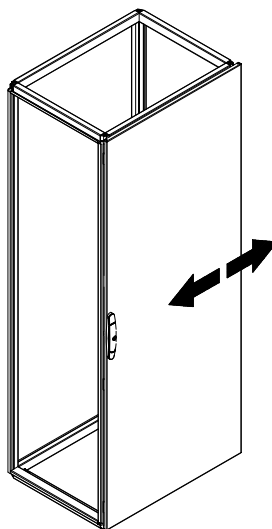
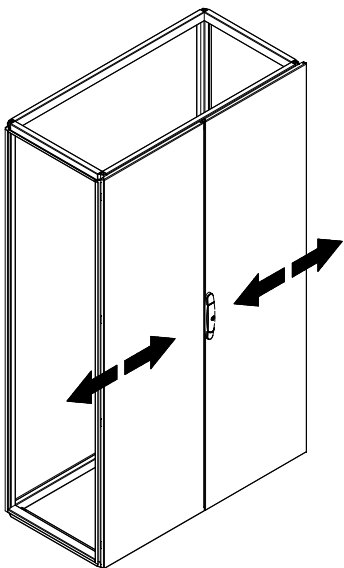


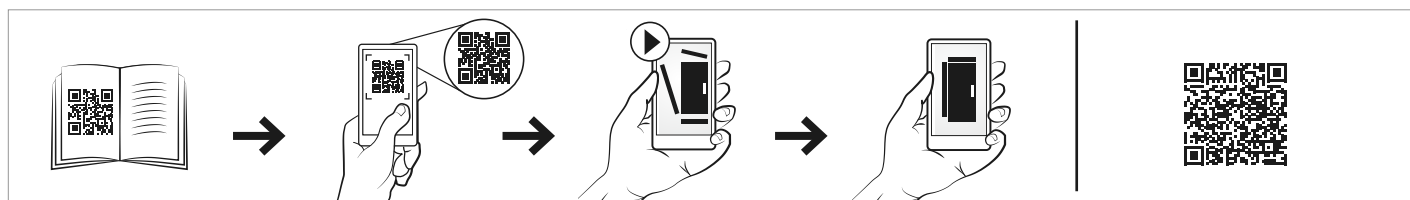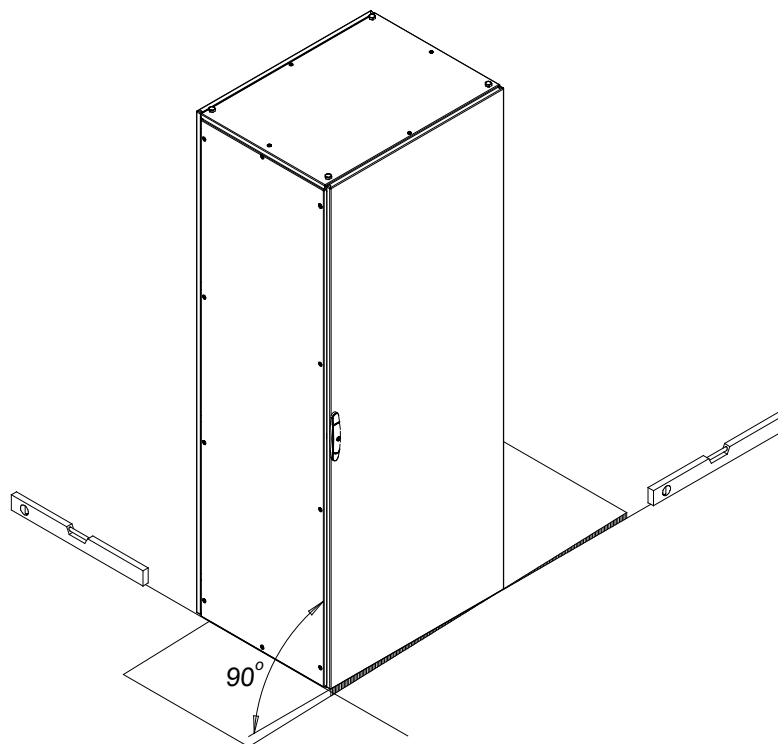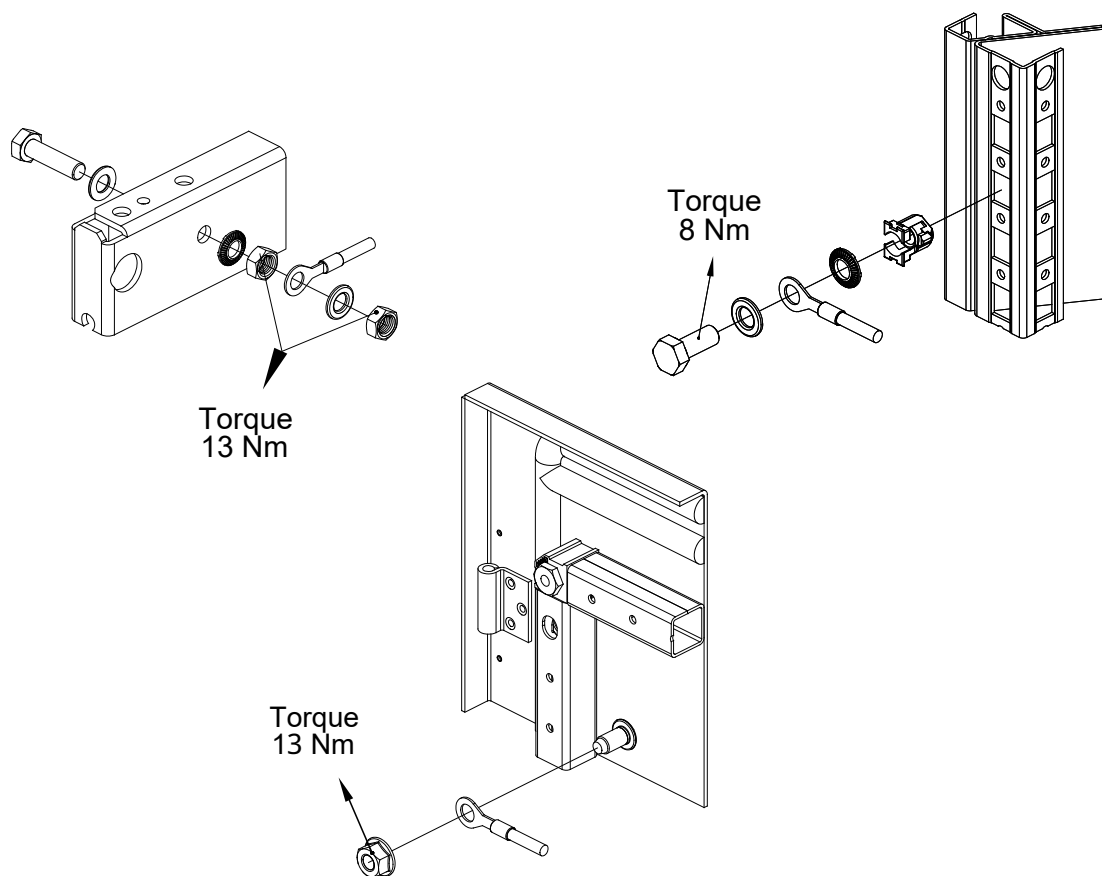


CNM

| Ref. | Pic.                                                                                         | Qty. |
|------|----------------------------------------------------------------------------------------------|------|
| A    | <br>M6 M8 | 1    |

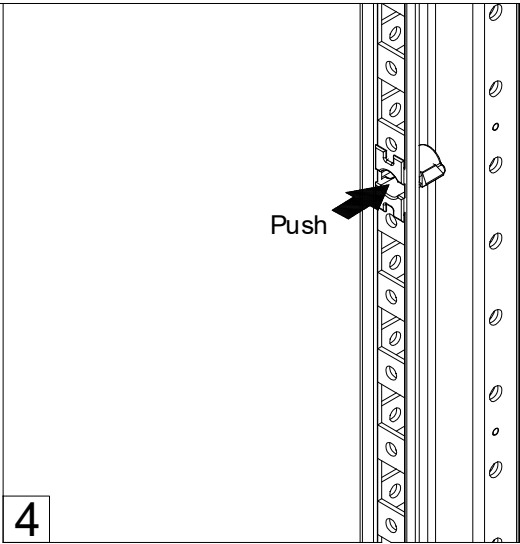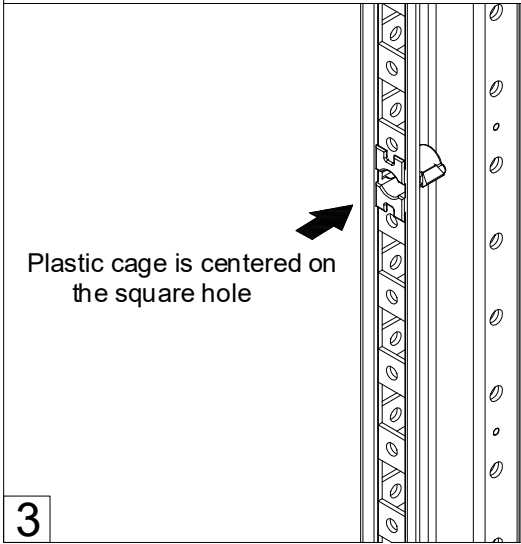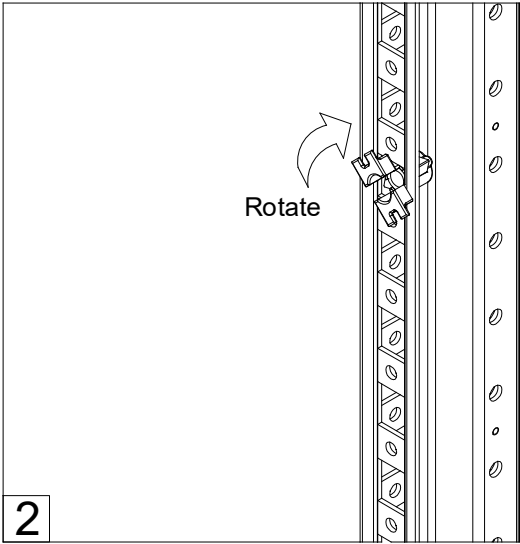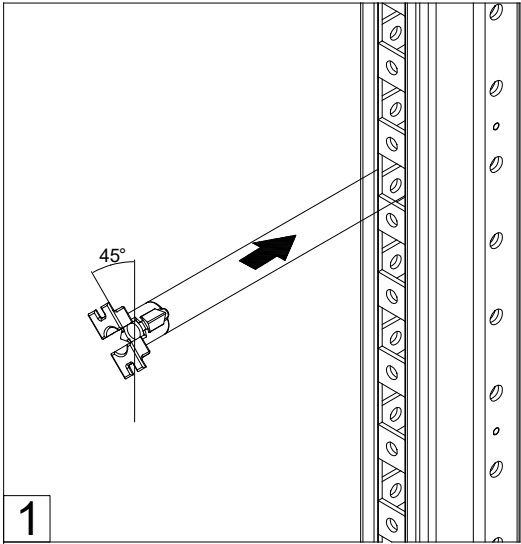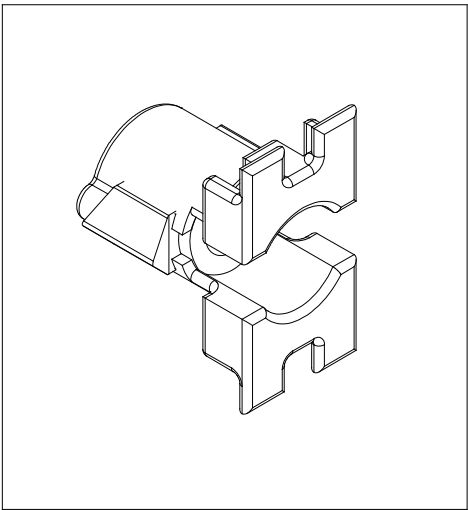

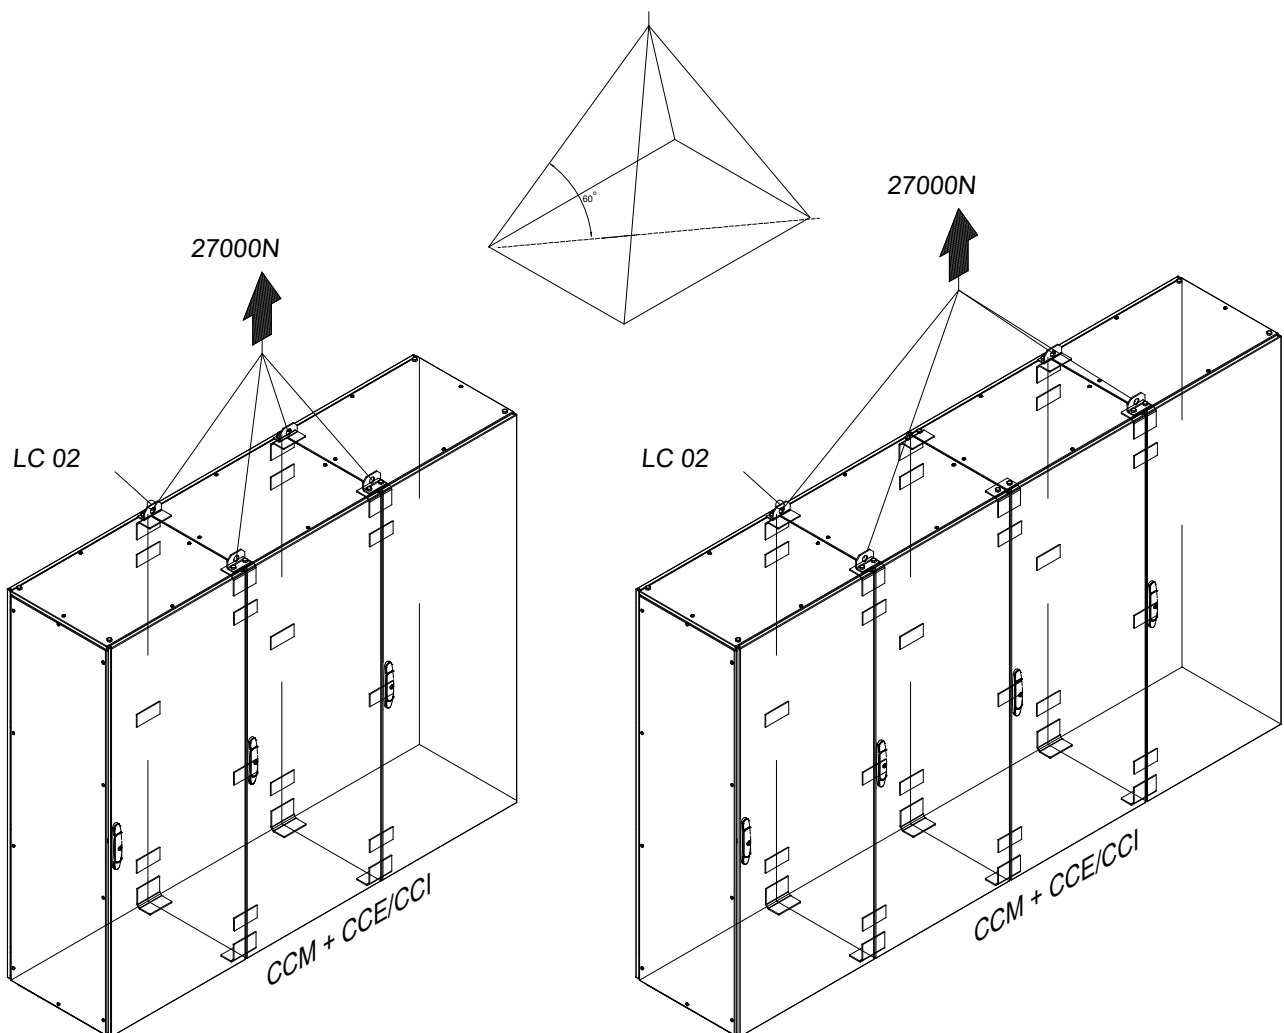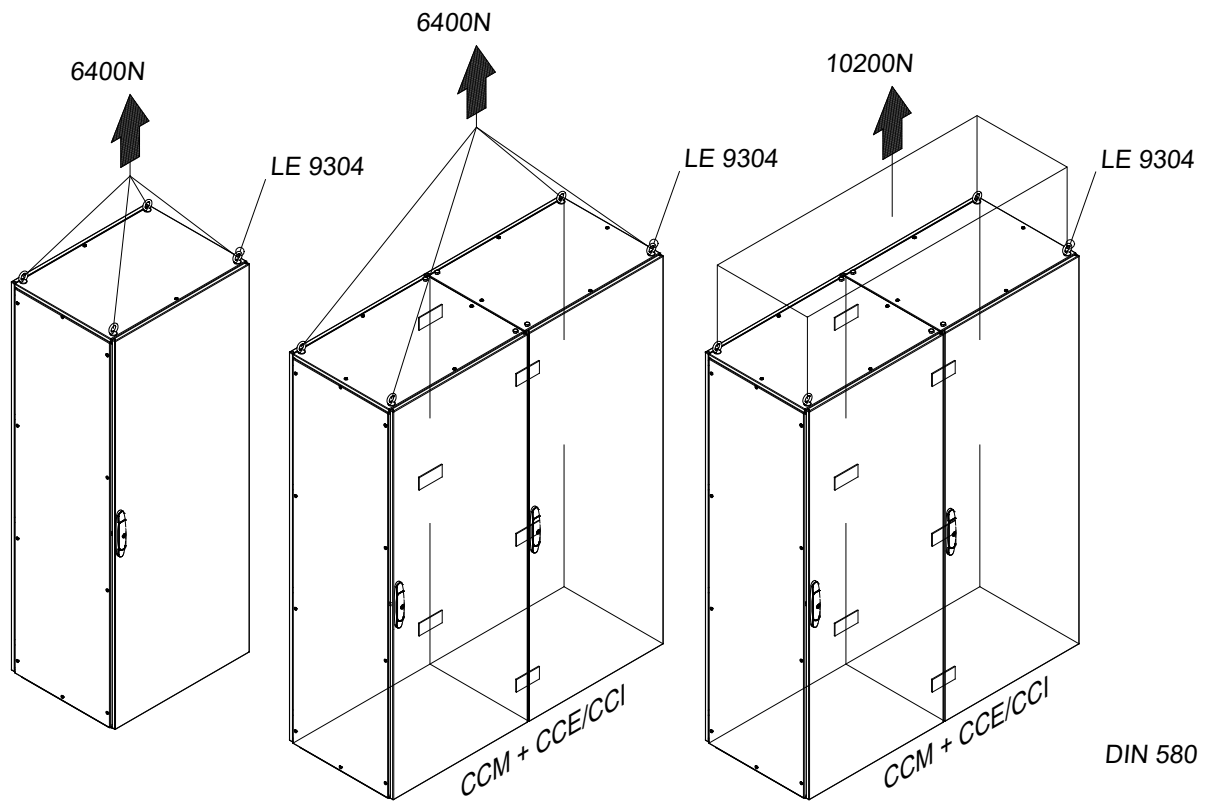



## MCM

### Mousepad RH into LH

