



## Syspend

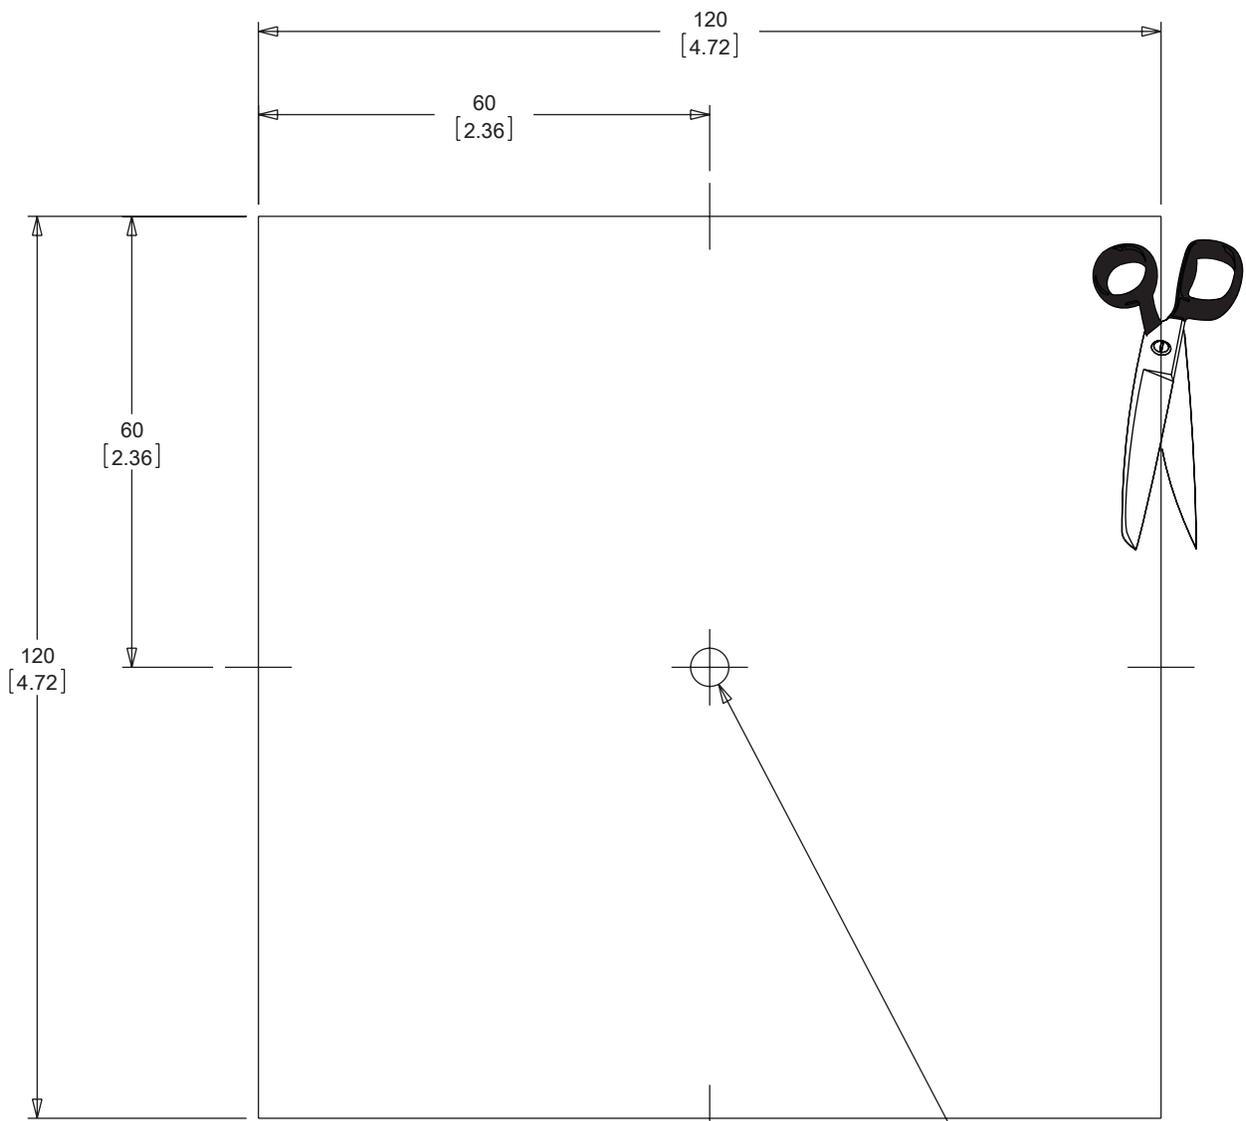



**NOTE:**

**Cutout template must be printed at 1:1 scale. Measure after printing to verify dimensions.**

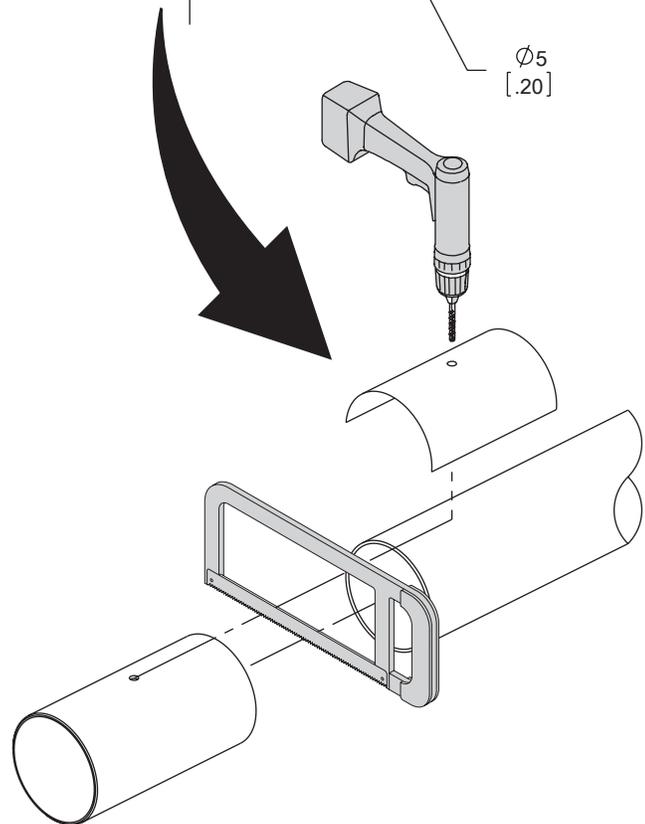



**3**



- a. Install tube/sleeve into fitting. Be sure safety screw is fully seated in fitting cutout.
- b. Push sleeve down into fitting until it is tight.
- c. Be sure top surface of sleeve is aligned at split, or left side is lightly lower than right.
- d. Place o-rings in position dry.

**4**



Lube top surface only of both o-rings (the surface the nut will contact)

